

INSTALLATION & MAINTENANCE MANUAL

LogiCool

**Free-Cooling Chiller
20kW - 40kW**

R410A



Authorised User No. 00007



About Airedale Products & Customer Services

WARRANTY,
COMMISSIONING &
MAINTENANCE

The equipment carries the Airedale **unit parts and labour warranty** in respect of non-consumable parts, for a period of **24 months** (Excludes the cost of any specialist access or lifting equipment.) Commissioning will be carried out by Airedale International Air Conditioning Ltd or an approved Airedale commissioning company.


To further protect your investment in Airedale products, we have introduced Airedale Service, who can provide full commissioning services, comprehensive maintenance packages and service cover 24 hours a day, 365 days a year (UK mainland). For a free quotation contact Airedale Service or your local Sales Engineer.

All Airedale products are designed in accordance with EU Directives regarding prevention of build up of water, associated with the risk of contaminants such as Legionella.

Where applicable, effective removal of condensate is achieved by gradient drainage to outlets and where used, humidification systems produce sterile, non-toxic steam during normal operation.

For effective prevention of such risk it is necessary that the equipment is maintained in accordance with Airedale recommendations.

CAUTION



Warranty cover is not a substitute for Maintenance. Warranty cover is conditional to maintenance being carried out in accordance with the recommendations provided during the warranty period. Failure to have the maintenance procedures carried out will invalidate the warranty and any liabilities by Airedale International Air Conditioning Ltd.

SPARES

A spares list for 1, 3 and 5 years will be supplied with every unit and is also available from our Spares department on request.

TRAINING

As well as our comprehensive range of products, Airedale offers a modular range of Refrigeration and Air Conditioning Training courses, for further information please contact Airedale.

CUSTOMER SERVICES

For further assistance, please e-mail: enquiries@airedale.com or telephone:

| | | |
|-------------------------|-----------------------|--|
| UK Sales Enquiries | + 44 (0) 113 238 7789 | enquiries@airedale.com |
| International Enquiries | + 44 (0) 113 239 1000 | enquiries@airedale.com |
| Spares Hot Line | + 44 (0) 113 238 7878 | spares@airedale.com |
| Airedale Service | + 44 (0) 113 239 1000 | service@airedale.com |
| Technical Support | + 44 (0) 113 239 1000 | tech.support@airedale.com |
| Training Enquiries | + 44 (0) 113 239 1000 | marketing@airedale.com |

For information, visit us at our Web Site: www.airedale.com

AIAC Ltd endeavours to ensure that the information in this document is correct and fairly stated, but none of the statements are to be relied upon as a statement or representation of fact. AIAC Ltd does not accept liability for any error or omission, or for any reliance placed on the information contained in this document.

The development of Airedale products and services is continuous and the information in this document may not be up to date. It is important to check the current position with AIAC Ltd at the address stated. This document is not part of a contract or licence unless expressly agreed.

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or information storage and retrieval systems, for any purpose other than the purchaser's personal use, without the express written permission of AIAC Ltd.

© 2016 Airedale International Air Conditioning Limited. All rights reserved. Printed in the UK.

Contents

| | |
|-----------------------------------|-----------|
| General Statement | 4 |
| Safety | 4 |
| Warranty | 5 |
| General Description | 6 |
| Unit Identification | 6 |
| Introduction | 6 |
| Refrigerant | 6 |
| Construction | 7 |
| Standard Features - Energy Saving | 7 |
| Compressors | 7 |
| Standard Features - General | 10 |
| Optional Extras - General | 11 |
| Installation Data | 12 |
| Dimensions | 12 |
| Weights | 12 |
| Unit Lifting | 13 |
| Positioning | 14 |
| Water System | 15 |
| Glycol Data | 16 |
| Standard Recommended Installation | 17 |
| System Schematic | 18 |
| Electrical | 19 |
| Interconnecting Wiring | 19 |
| Electrical Data | 21 |
| Controls | 22 |
| Temperature Control | 22 |
| Operation | 23 |
| Setting up | 24 |
| Viewing Unit Operating Status | 25 |
| Alarms | 26 |
| Commissioning Data | 28 |
| Operating Limits | 28 |
| Mechanical Data | 28 |
| Waterside Pressure Drops | 29 |
| Pump Packages (Optional Extras) | 30 |
| Operational Sequence | 32 |
| Commissioning Procedure | 33 |
| Pre Commissioning Checklist | 33 |
| Commissioning Checklist | 35 |
| Maintenance | 36 |
| General Maintenance | 36 |
| Compressor Maintenance | 37 |
| Shut Down Periods | 37 |
| Parts Identification | 40 |
| Spares | 40 |

General Statement

IMPORTANT

The information contained in this manual is critical to the correct operation and maintenance of the unit and should be read by all persons responsible for the installation, commissioning and maintenance of this Airedale unit.

SAFETY

The equipment has been designed and manufactured to meet international safety standards but, like any mechanical/electrical equipment, care must be taken if you are to obtain the best results.

- CAUTION
- 1

Installation, service and maintenance of Airedale equipment should only be carried out by technically trained competent personnel.
- CAUTION
- 2

When working with any air conditioning units ensure that the electrical isolator is switched off prior to servicing or repair work and that there is no power to any part of the equipment.
- 3

Also ensure that there are no other power feeds to the unit such as fire alarm circuits, BMS circuits etc
- 4

Electrical installation commissioning and maintenance work on this equipment should be undertaken by competent and trained personnel in accordance with local relevant standards and codes of practice.
- 5

Refrigerant used in this range of products is classified under the COSHH regulations as an irritant, with set Occupational Exposure Levels (OEL) for consideration if this plant is installed in confined or poorly ventilated areas.
- 6

A full hazard data sheet in accordance with COSHH regulations is available should this be required.

SPARES

For ease of identification when ordering spares or contacting Airedale about your unit, please quote the unit type, unit serial number and the date of manufacture, which can be found on the unit serial plate.

A spares list for 1, 3 and 5 years will be supplied with every unit and is also available from our Spares department on request.

SERIAL PLATE

The serial plate can be located to the inside of the control panel door, refer to **Parts Identification** section.

Airedale

APPLIED THERMAL INNOVATION

UK Office

+ 44 113 2391000

+ 44 113 2507219

Unit/Gerät/Unite

Serial/Serie/Serie

Manufactured/Hergestellt/Fabriqué

Supply/Spannung/Alimentation

Fuse/Hauptsicherung/Fusibles

Test Pressure

Prüfdruck

Pression d'essai

Refrigerant & Charge

Kältemittel und Füllung

Refrigerant & Charge

Max. operating pressure

Betriebsdruck (Maximal)

Pression de marche (Maximum)

N.B. No: 0086

LCC40

81543668-001 (63091072)

24/01/2007

400 V 3 PH 50 Hz

25.0 A

58.0 BAR

www.airedale.com

CE

Warranty

GENERAL

To be read in conjunction with Airedale International Air Conditioning Ltd standard Conditions of Sale and any related quotation.

The equipment carries Airedale's standard **Parts** (non consumable) & **Labour** warranty for a period of **12 months** from the date of commissioning or **18 months** from the date of despatch, whichever is the sooner. Commissioning must be carried out by Airedale or an approved Airedale company.

WARRANTY IS ONLY VALID IN THE EVENT THAT:

- 1 In the period between delivery and commissioning the equipment:
 - is properly protected & serviced
 - water flow safety devices are in place and fully operational
- 2 The equipment is serviced & maintained by Airedale or an approved Airedale company in accordance with the Installation & Maintenance manual provided, during the Warranty Period.

In the event of a problem being reported, Airedale will cover the full cost of rectification (excluding costs for any specialist access or lifting equipment) if warranty is valid under these conditions.

Any spare part supplied by Airedale under the warranty shall be warranted for the unexpired period of the warranty or 3 months from delivery whichever period is the longer, with the exception of compressors on which a further 12 months warranty is granted.

PROCEDURE

- The on site contractor or service company place an official order on Airedale for the replacement part including site labour if required. Airedale will acknowledge this order with detailed prices for components, travel and labour rates.
- Should warranty be accepted, following inspection of the faulty component, a credit note will be issued against the invoice raised in line with the acknowledgement.
- Should warranty be refused the invoice raised against the acknowledgement becomes payable on normal terms.
- Airedale reserves the right to carry out site warranty labour work using their own direct labour or by sub contracting to an approved company of their choice.

EXCLUSIONS

Warranty may be refused for the following reasons:

- Misapplication of product or component
- Incorrect site installation
- Incomplete commissioning documentation
- Inadequate site installation
- Inadequate site maintenance
- Damage caused by mishandling
- Replaced part being returned damaged without explanation
- Unnecessary delays incurred in return of defective component

GENERAL

Dead on arrival or manufacturing defects are the responsibility of Airedale and should be reported immediately.

In the event of a warranty failure, dead on arrival or manufacturing defect, the Airedale Service department should be contacted and on receipt of an order, an Airedale engineer (or representative) will be directed to site as soon as possible.

RETURNS ANALYSIS

All faulty components returned under warranty are analysed on a monthly basis as a means of verifying component and product reliability as well as supplier performance. It is important that all component failures are reported correctly.

General Description

UNIT IDENTIFICATION

| | | | |
|---------|---|-----|----|
| | | LCC | 20 |
| LCC | LogiCool Free-Cooling Chiller | | |
| 20 - 40 | Model Size (Expressed as Nominal Cooling in kW) | | |

INTRODUCTION


The Airedale range of LogiCool Compact air cooled liquid chillers covers the nominal capacity range 20kW to 40kW in 2 model sizes.

This range has been developed for high heat load requirements and is ideally suited to Server room applications. Offering simultaneous DX Mechanical cooling and Free-Cooling operation, the range utilises the latest technology to achieve a high level of energy efficient operation.

As standard, the LogiCool offers modulating capacity control through the use of digital scroll compressor technology and further increased energy efficiency with optional EC Fans, refer to **Optional Extras - Energy Saving** for details.

Attention has been placed on maximising the unit’s cooling and energy performance while keeping the footprint to an absolute minimum.

CE DIRECTIVE



Airedale certify that the equipment detailed in this manual conforms with the following EC Directives:

| | |
|---|--------------------------------------|
| Electromagnetic Compatibility Directive (EMC) | 2014/30/EU |
| Low Voltage Directive (LVD) | 2014/35/EU |
| Machinery Directive (MD) | 89/392/EEC in the version 2006/42/EC |
| Pressure Equipment Directive (PED) | 97/23/EC Article 13 of 2014/68/EU |

PS and TS Values

To comply with these directives appropriate national & harmonised standards have been applied. These are listed on the Declaration of Conformity, supplied with each product.

Maximum and Minimum Operation Temperature (TS) and Pressure (PS)
Operating Temperature (TS), TS = Min -5°C to Max 120°C *
Maximum Operating Pressure (PS) PS = High Side 40.7 Barg
*Based upon the maximum machine running temperatures.

REFRIGERANT

The range has been designed and optimised for operation with ozone benign refrigerant **R410A**.

General Description

CONSTRUCTION

The base is fabricated from galvanised steel coated with epoxy baked powder paint to ensure a durable, weatherproof construction.

Unit panels are manufactured from galvanised sheet steel coated with epoxy baked powder paint to provide a durable and weatherproof finish.

Standard unit colour is Light Grey (RAL 7035).

Fully weatherproofed electrical panels are situated at one end of the unit.

Access to the water and refrigeration components is via the lower front panel.

Coil guards are fitted as standard.

A set of 4 collared eye bolts to BS4278 are supplied.

STANDARD FEATURES - ENERGY SAVING

COMPRESSORS

Scroll compressor(s) comprising:

- Internal motor protection
- Internal pressure relief
- External discharge temperature protection
- Oil sight glass

LCC20

Utilises 1 digital scroll compressor offering modulating capacity control between 20 - 100% of unit capacity.

LCC40

Utilises 1 digital scroll compressor coupled in tandem with 1 standard scroll compressor offering modulating capacity control between 10 - 100% of unit capacity.

Digital Scroll Compressors

Digital scroll compressor technology offers compressor capacity modulation from 20% to 100% achieved by the use of an externally integrated long life electronically controlled solenoid valve which loads and unloads the compressor scroll based on a 20 second cycle.

The solenoid valve uses suction and discharge pressures through a modulation chamber to cause a spring loaded piston attached to the top scroll to fall down at high pressure and move up at low. The moving of the piston separates the scrolls and results in no compression of refrigerant.

As the digital compressor is always operating at either 100% or 0% the mass flow of refrigerant through the system is always high, simplifying component selection and pipe work design to guarantee oil return.

Energy Efficiency

The digitally modulated solenoid achieves capacity modulation of 20% to 100% by varying the loaded or unloaded compressor cycle time and averaging the sum of the loaded and unloaded state. The digital scroll compressor operates in an unloaded state for a proportion of the 20 second cycle time; as a result, the load on the compressor is greatly reduced as refrigerant is not drawn. Consequently the energy consumed at partial load condition is only a percentage of that consumed during full load condition, ie:

$$\frac{(\text{Loaded Time} \times 100\%) + (\text{Unloaded Time} \times 10\%)}{(\text{Loaded Time} + \text{Unloaded Time})} = \text{Average Power}$$


General Description

STANDARD FEATURES - ENERGY SAVING


Digital Scroll Compressors

Operation The following examples illustrate the flexibility of the digital compressor loading stages within the 20 second cycle time:


Example A Where: Solenoid Energised = 10 seconds Loaded Time
Solenoid De-energised = 10 seconds Unloaded Time

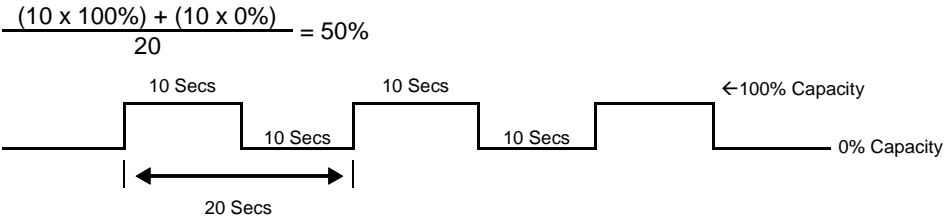

Example B Where: Solenoid Energised = 5 seconds Loaded Time
Solenoid De-energised = 15 seconds Unloaded Time

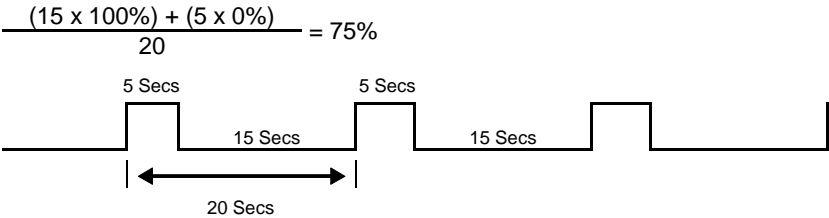

Control & Monitoring The systems superheat is controlled by a dedicated microprocessor and digital compressor performance is monitored via the AireTronix controller display.

CAUTION  The digital scroll compressor is always operating at either 100% or 0% mass flow. When inspecting the refrigerant system with gauges, this is evident by pulsing of the system pressures. Therefore, all pressure measurements **MUST** be taken when the digital scroll compressor is compressing refrigerant (solenoid de-energised).

General Description

STANDARD FEATURES - ENERGY SAVING

Electronic Expansion Valves (EEV)

Electronic expansion valves differ to the normal thermostatic expansion valves in their ability to maintain control of the suction superheat at reduced head pressures. This can lead to significant energy savings particularly at reduced loading and low ambient temperatures. Factory fitted, for full details refer to the *Technical Manual*.

Evaporator

Stainless steel high efficiency brazed plate heat exchanger(s) will allow optimum heat transfer between media. Each heat exchanger is insulated with closed cell polyurethane foam to Class 1 fire rating and the material is UV resistant.

A self-regulating pad heater is fitted to the single evaporator and will protect against freeze up in ambient temperatures as low as -20°C.

Condenser

Large surface area coil(s) ideally positioned to optimise airflow and heat transfer, manufactured from refrigeration quality copper tubes with mechanically bonded aluminium fins.

The copper tube is internally rifled for improved heat transfer.

Free-Cooling Coil

Large surface area coil(s) ideally positioned to optimise airflow and heat transfer, manufactured from copper tubes with mechanically bonded aluminium fins.

Spacing between condenser and free-cooling coils is provided for cleaning maintenance along with top access holes and drain holes to the base.

Fan & Motor Assembly

Sickle bladed fan assemblies with integral long bellmouth and fingerproof grille, incorporate external rotor ac motor technology, capable of highly accurate discreet speed control, discharges air vertically. The fans offer maximum airflow performance while keeping sound levels to a minimum.

Each fan is speed controllable and operates from a 3 phase electrical supply.

Energy efficient Electronically Commutated (EC) fans are also available, refer to *Optional Extras - Energy Saving*.

Head Pressure Control

3 phase head pressure controllers are fitted which modulate the fan speed to maintain a constant condensing pressure in the DX mechanical cooling mode and afford reductions in input power when overcooling in low ambients.

A pressure transducer is fitted to the liquid line which in turn feeds back the head pressure to the microprocessor. The condenser fan speed can then modulate via the controller to provide optimum control under varying ambient conditions. The head pressure can be monitored via the display keypad.

Additional refrigeration valves are fitted to allow mechanical and free-cooling functions to operate simultaneously in order to maximise free-cooling and minimise energy consumption.

General Description

STANDARD FEATURES - GENERAL

Refrigeration

Each refrigeration circuit is supplied with the following:

- Full operating charge of R410A
- Electronic Expansion Valve (EEV)
- Liquid line ball valve
- Discharge line ball valve
- Liquid line filter drier
- Liquid line sight glass
- Low pressure switch with manual reset via microprocessor controller
- High pressure switch with manual reset
- Suction and liquid pressure transducers
- Valves for refrigeration head pressure control

Water / Glycol

Each water glycol circuit is supplied with the following:

- 3 way modulating valve to control free-cooling operation
- Strategically placed automatic air vents
- Strategically placed drain valves
- Ball valve(s) for Free-cooling coil isolation to allow for maintenance
- Pressure transducer(s) across evaporator to monitor water pressure drop
- Inlet water filter ball valve 20 mesh

Flushing Bypass Kit (Standard)

Comprises:

- Shut off valves

Factory fitted to protect the evaporator from clogging by sediment and to enable the system to be purged before running.

Controls

As standard, the **AIRE**Tronix microprocessor controller can provide modulating capacity control.

Optionally, the controller is designed to provide capabilities for;

- Building Management Systems

to meet all your system requirements, please confirm at time of order.

For further details, refer to **Controls**.

Evaporator Differential Pressure Sensor

Facilitates low flow limiting and pressure drop monitoring via the microprocessor.

Measures the evaporator pressure drop which in turn enables the evaporator flow rate to be calculated.

General Description

STANDARD FEATURES - GENERAL

Electrical

Dedicated weatherproof electrical power and controls panels are situated at the front of the unit and contain:

- Separate, fully accessible, controls compartment
- Circuit breakers for protection of all major unit components
- Separate, permanent supply for controls/trace heating, 230V / 50Hz / 1Ph

CAUTION



A fused and isolated electrical supply of the appropriate phase, frequency and voltage should be installed.

The electrical power and control panel is wired to the latest European standards and codes of practice.

Mains supply is 3 phase and a neutral is not required. Refer to **Interconnecting** Wiring.

Electrical terminals for external evaporator pipework trace heating (240V/500W) are provided.

OPTIONAL EXTRAS - ENERGY SAVING

Electronic Soft Start

The electronic soft start enables the chiller compressor motor to be ramped to speed with the minimum full load current. Further benefits include removal of nuisance tripping, supply voltage dips and motor overheating.

Electronically Commutated (EC) Fan Motor

Sickle bladed fan assemblies with integral long bellmouth and fingerproof grille. Incorporate external EC rotor motor technology, to provide highly accurate discreet speed control, discharge air vertically. The fans offer maximum airflow performance while keeping sound levels to a minimum.

Each fan incorporates on board electronics with inverter-driven DC motor control, responding to a signal from the unit microprocessor.

For further details, please refer to **Technical Manual**.

OPTIONAL EXTRAS - GENERAL

Factory Fitted

- Corrosion Resistant Coated Coils
- BMS Interface Card
- Leak Detection System
- Remote Setpoint Adjust
- Flushing Bypass Kit (Incl. Shut off & Water Regulating Valve)
- Integral Pump Packages
- Compressor Oil Heater
- Expansion Vessel
- Alternative Refrigerant (Outside EU)

OPTIONAL UNIT COVER

- Commissioning
 - Chillerguard® Maintenance (1)
- (1) UK Mainland Sites




For details and a competitive quotation, contact Airedale Service.

Installation Data

DIMENSIONS

IMPORTANT ▽ The following information is for general guidance; the certified drawings provided must be referred to for installation.

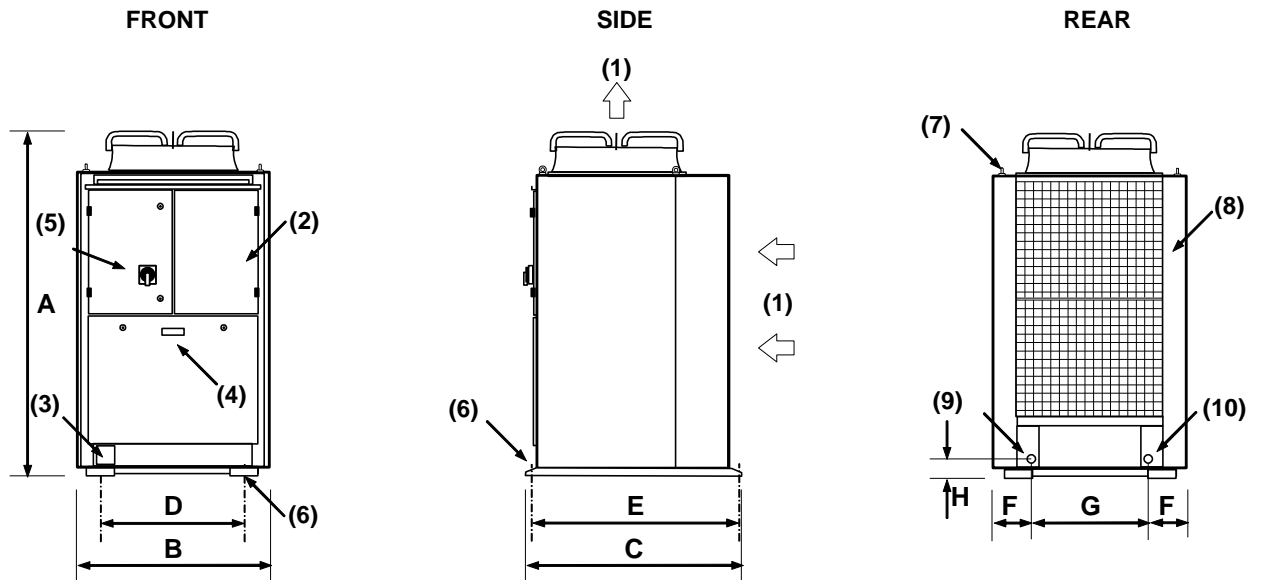

| | | A | B | C | D (8) | E (8) | F | G | H |
|-------|----|------|------|------|-------|-------|-----|-----|----|
| LCC20 | mm | 2063 | 1160 | 1286 | 867 | 1246 | 223 | 713 | 94 |
| LCC40 | mm | 2227 | 1280 | 1406 | 987 | 1367 | 363 | 554 | 40 |

Unit diagrams can be supplied on request, please contact Airedale.

- (1) Airflow direction

(2) Electric control panel

(3) Mains cable entry

(4) Compressor compartment

(5) Mains electric isolator

(6) 1/2 BSP Ø mounting holes

(7) Lifting eye bolts x 4

(8) Refrigeration component access panels

(9) Water Outlet

(10) Water Inlet
- BSP Male Connection:

LCC20 1 1/4"

LCC40 1 1/2"

WEIGHTS


| | | Machine | Operating |
|-------|----|---------|-----------|
| LCC20 | kg | 530 | 540 |
| LCC40 | kg | 620 | 635 |

(1) Based on standard unit, for units fitted options, please contact Airedale.

Installation Data


UNIT LIFTING

- Employ lifting specialists
- Local codes and regulations relating to the lifting of this type of equipment should be observed
- Use the lifting eye bolts/lifting lugs provided
- Attach lifting chains to the 4 lifting eye bolts/lifting lugs provided; each chain and eye bolt must be capable of lifting the whole chiller
- Use the appropriate spreader bars/lifting slings with the holes/lugs provided
- Chains/slugs MUST NOT interfere with the casing of fan assembly to avoid damage
- Lift the unit slowly and evenly

IMPORTANT  If the unit is dropped, it should immediately be checked for damage and reported to Airedale.

CAUTION  Only use lifting points provided.

The unit should be lifted from the top and where possible, with all packing and protection in position. If any other type of slinging is used, due care should be taken to ensure that the slings do not crush the casework or coil.

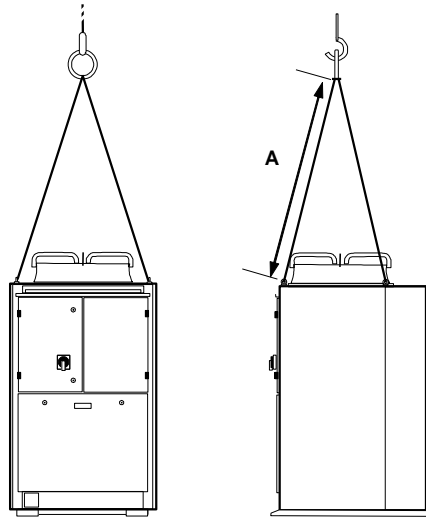


A = Minimum lifting chain length of 1500mm


Installation Data

POSITIONING

The installation position should be selected with the following points in mind:

- Position on a stable and even base, levelled to ensure that the compressor operates correctly
- Levelling should be to +/- 5mm
- Where vibration transmission to the building structure is possible, fit pad anti-vibration mounts and flexible water connections
- Observe airflow and maintenance clearances
- Pipework and electrical connections are readily accessible
- Where multiple units are installed, due care should be taken to avoid the discharge air from each unit adversely affecting other units in the vicinity
- Within a side enclosed installation, the fan MUST be higher than the enclosing structure
- Multiply x 2 airflow clearance for 3 side enclosed applications
- Ensure there are no obstructions directly above the fans
- Allow free space above the fans to prevent air recirculation

CAUTION  Prior to connecting services, ensure that the equipment is installed and completely level.

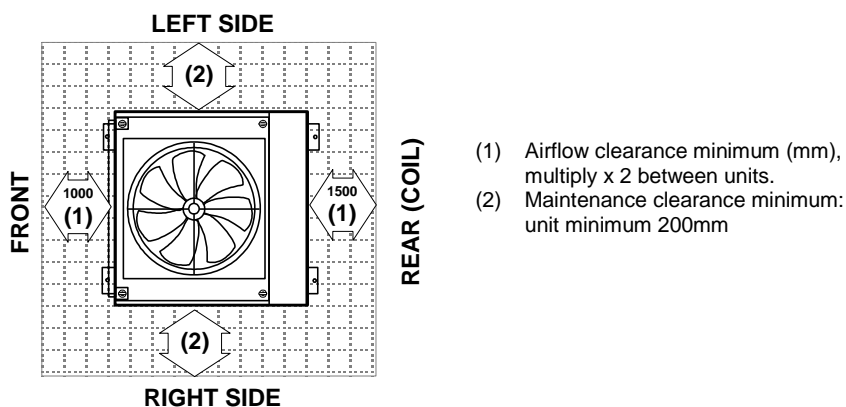

Installation Data

WATER SYSTEM

Chilled water pipework and ancillary components must be installed in accordance with:

- National and Local Water supply company standards
- The manufacturer's instructions are followed when fitting ancillary components
- The system liquid is treated to prevent corrosion and algae forming
- Glycol required as standard, with the correct concentration to suit the lowest ambient the equipment will experience
- The schematic is referred to as a guide to ancillary recommendations



CAUTION The unit water connections are **NOT** designed to support external pipework, pipework **MUST** be supported separately.

| | | LCC20 | LCC40 |
|-----------------------------------|-------|--------------|-------|
| Connections | | | |
| Water Inlet / Outlet - Type | | PN16 | PN16 |
| Water Inlet / Outlet - Size | in | 1 1/4 | 1 1/2 |
| Water Drain/Bleed | in | 1/2 | 1/2 |
| Water System | | | |
| Min. System Water Volume | (2) l | 112.0 | 207.4 |
| Max. System Press | bar | 10 | 10 |
| OPTIONAL EXTRAS | | | |
| Water Pump (1) | | In Line Pump | |
| Max. System Press | bar | 7 | 7 |
| Nom. External Head: | | | |
| Single / Run & Standby - Standard | bar | 85 | 87 |
| Single / Run & Standby - Larger | bar | 169 | 162 |
| Expansion tank | | | |
| Water Capacity | l | 8 | 12 |

(1) Based on 12/7°C water temperature and 35°C ambient with a 20% Ethylene Glycol Water Concentration.

(2) For minimum system volume calculation method, refer to the **Technical Manual**.

Pressure Testing

When all the pipework has been connected in the system, proceed as follows:

- Ensure all shut off and control valves are fully open
- Pressurise system to the operating pressure, hold for 1 hour (a gradual fall in pressure shown on the gauge indicates a leak)
- Leaks should be found and repaired and the unit pressure tested for a further hour

When the pressure remains at the operating pressure for 1 hour, the system can be considered leak free.



CAUTION Although a pressure of 1.5 x working pressure is adequate for testing purposes, most local water authorities require 2 x working pressure.



RECORD Record on commissioning sheet provided once completed.

Filling



CAUTION The whole system **MUST** be flushed prior to filling to remove debris left in the water pipework by using a flushing bypass as shown to avoid serious damage to the plate evaporator.

All free-cooling units should use a **MINIMUM 20% glycol concentration**.

With auto-pressurisation system, regularly monitor the glycol concentration to ensure it does not fall below the minimum 20%.

During filling the system should be vented at all high points.

Once the system has been completely vented all vents should be closed.

To prevent air locking in the system it is advisable to fill the systems from the lowest point, ie drain point on pipework.

Installation Data

GLYCOL DATA

For a given percentage of glycol in the system there are correction factors that need to be applied, the following tables can be used as a guide.

CAUTION  All free-cooling units should use a **MINIMUM 20% glycol concentration**.

Ethylene Glycol Nominal Correction Factors

| Glycol in System / Freezing Point °C | | 20% / -9°C | 30% / -15°C | 40% / -23°C |
|--------------------------------------|---|------------|-------------|-------------|
| Output (kW) | x | 1.00 | 0.98 | 0.96 |
| Input (kW) | | 1.00 | 0.98 | 0.97 |
| Water Flow (l/s) | | 1.00 | 1.09 | 1.12 |
| Pressure Drop (kPa) | | 1.00 | 1.29 | 1.48 |

Propylene Glycol Nominal Correction Factors

| Glycol in System / Freezing Point °C | | 20% / -6°C | 30% / -12°C | 40% / -20°C |
|--------------------------------------|---|------------|-------------|-------------|
| Output (kW) | x | 0.98 | 0.94 | 0.91 |
| Input (kW) | | 1.00 | 0.98 | 0.97 |
| Water Flow (l/s) | | 1.00 | 0.99 | 0.99 |
| Pressure Drop (kPa) | | 1.08 | 1.22 | 1.35 |

Example

Model Ref. = **LCC40**
 Ambient: = 35°C
 Fluid = 30% Ethylene Glycol
 Inlet Fluid Temp. = 7°C
 Outlet Fluid Temp. = 12°C (**5°C ΔT**)

| | | | Catalogue | Multiplier | Corrected Figure |
|-----------------------|---|--|-----------|------------|------------------|
| Output (kW) | = | | 33.7 | x 0.98 | = 33.0 kW |
| Compressor Input (kW) | | | 14.4 | x 0.98 | = 14.1 kW |
| Water Flow (l/s) | | $\left\{ \frac{\text{Output}}{3.9 \times \Delta T} \right\}$ | 1.99 | x 1.02 | = 2.03 l/s |
| Pressure Drop (kPa) | | Plot from curve (refer to Waterside Pressure Drops) | 128 | x 1.15 | = 147.2 kPa |


Where:
 Output = (kW) Output kW, refer to **Technical Manual**.
 Input = (kW) Input kW, refer to **Technical Manual**.
 ΔT = (°C) Difference of Entering Water and Leaving Water temperature


Installation Data

STANDARD RECOMMENDED INSTALLATION (Parts Supplied by Others)


General

Airedale offers a wide range of optional extras to suit various applications including integral pump, please refer to **Optional Extras - General** for details.

CAUTION  Should non Airedale parts be used, the following installation recommendations should be adhered to. Failure to do this will invalidate the chiller warranty.

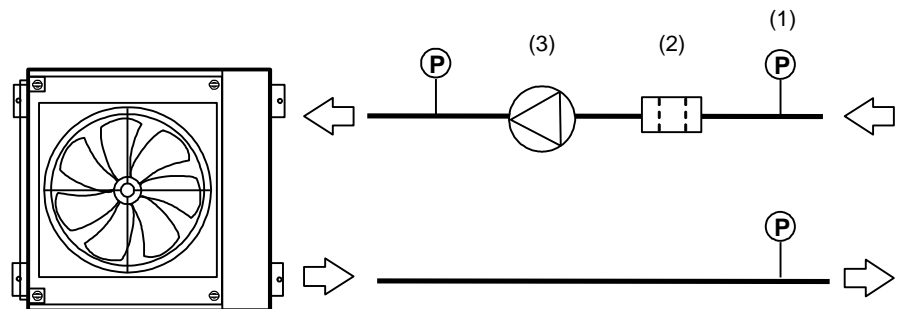

- (1) Pressure Sensors
- (2) Filter 1 1/16 BSP
- (3) Pump

CAUTION  Full design water flow **MUST** be maintained at all times. Variable water volume is **NOT** recommended and will invalidate warranty

CAUTION  The correct operation of the flow proving device is critical if the chiller warranty is to be valid.

CAUTION  Following components are fitted within the chiller unit as standard:

- Temperature Sensors
- Drain Point
- Auto Air Vent
- Differential Pressure Monitoring of Evaporator
- Pressure Sensing Points
- 20 Mesh Inlet Filter

Component Recommended Requirements

The recommended requirements to allow commissioning to be carried out correctly are:

- The inclusion of Binder Points adjacent to the flow and return connections, to allow temperature and pressure readings
- A water-flow commissioning valve set fitted to the system
- In multiple chiller installations, 1 commissioning valve set is required per chiller
- Isolating valves should be installed adjacent to all major items of equipment for ease of maintenance
- Balancing valves can be installed if required to aid correct system balancing
- All chilled water pipework must be insulated and vapour sealed to avoid condensation
- If several units are installed in parallel adjacent to each other, reverse return should be applied to avoid unnecessary balancing valves

Installation Data

PUMPS

- Pump Statement
- When installing circulating water pumps or equipment containing them, the following rules should be applied:

 - Ensure the system is filled with liquid then vented and the pump primed with water before running the pump, this is required because the pumped liquid cools the pump bearings and mechanical seal faces
 - To avoid cavitation the NPSH (Net Positive Suction Head) incorporating a safety margin of 0.5m head must be available at the pump inlet during operation

SYSTEM SCHEMATIC

Pump Packages (Optional Extras)

- Flow Schemes:
- A


Standard Unit - No Pump

B

Single Head Pump

C

Run/Standby Pump

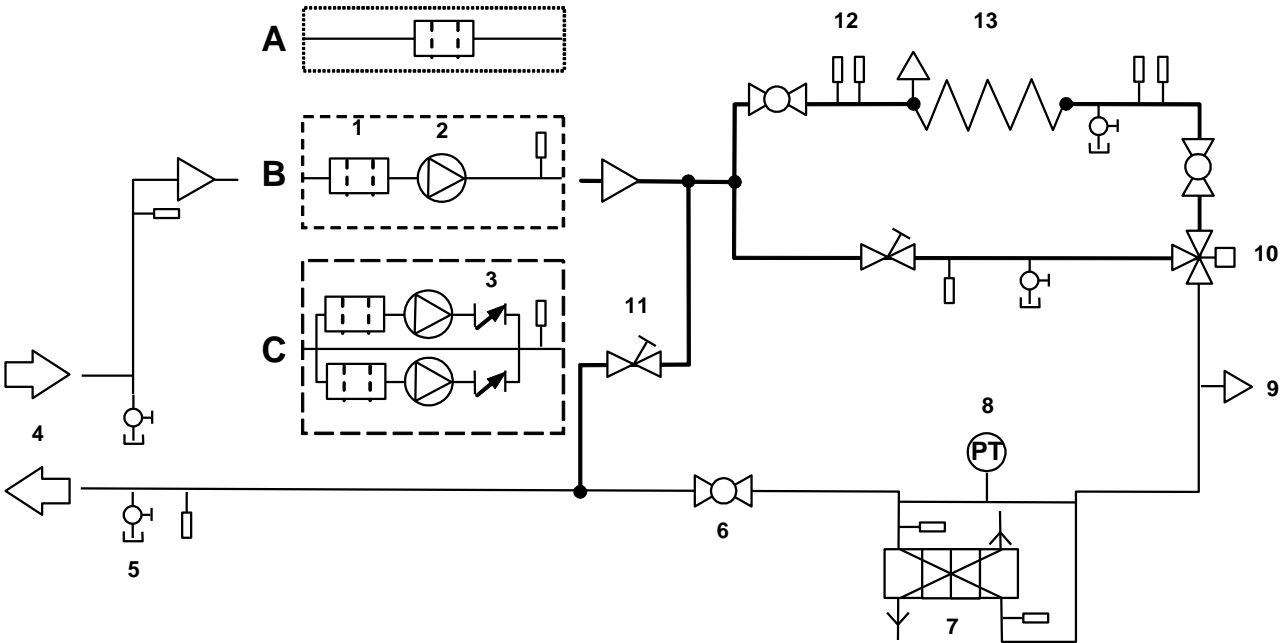

- 1

Filter Ball Valve

2

Pump

3

Non Return Valve

4

Water Supply & Return

5

Drain

6

Ball Valve

7

Condenser Coil
- 8

Differential Pressure Transducer

9

Auto Air Vent

10

Mixing Valve

11

DRV (Flushing Bypass)

12

Binder Points

13

Free Cooling Coil

Installation Data

ELECTRICAL

CAUTION  ALL work **MUST** be carried out by technically trained competent personnel.

 The equipment contains live electrical and moving parts, **ISOLATE** prior to maintenance or repair work.

General

- As standard the equipment is designed for 400V, 3 phase, 3 wire 50Hz and a separate permanent 230V, 1 phase, 50Hz supply, to all relevant IEE regulations, British standards and IEC requirements
- The control voltage to the interlocks is 24V, always size the low voltage interlock and protection cabling for a maximum voltage drop of 2V
- Avoid large voltage drops on cable runs, particularly low voltage wiring

CAUTION  A fused and isolated electrical supply of the appropriate phase, frequency and voltage should be installed.

Wires should be capable of carrying the maximum load current under non-fault conditions at the stipulated voltage.

A separately fused, locally isolated, permanent single phase and neutral supply **MUST BE FITTED** for the compressor oil heater (if fitted), evaporator trace heating and control circuits, **FAILURE to do so could INVALIDATE WARRANTY.**


Interlocks & Protection

Always electrically interlock the operation of the chiller with the pump controls for safety reasons.

CAUTION  Do not rely solely on the BMS to protect the chiller against low flow conditions.


If a pump package is not selected as part of the unit, an evaporator pump interlock **MUST** be directly wired to the chiller, to **Interconnecting** Wiring diagram. Failure to comply will invalidate the chiller warranty.

INTERCONNECTING WIRING

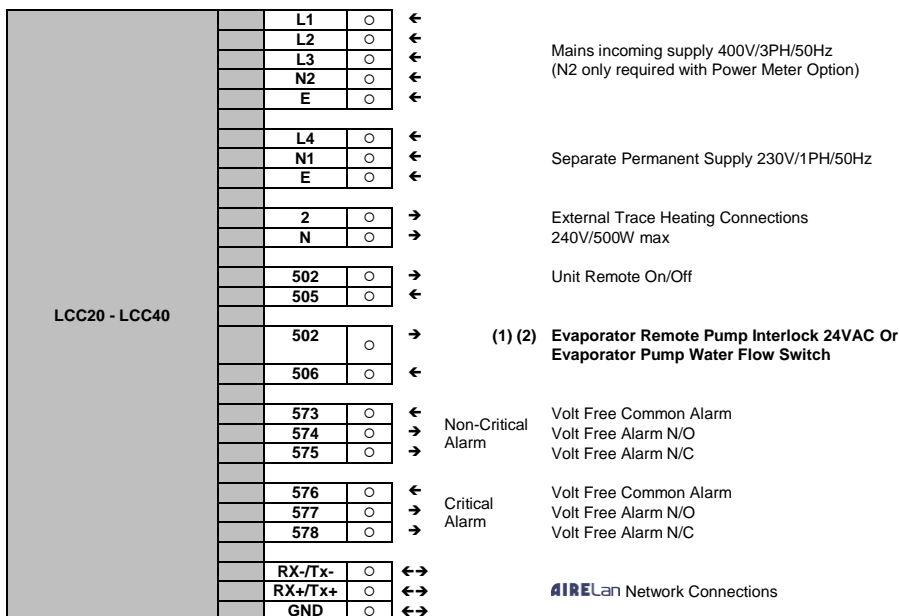

CAUTION  (1) **MUST** be directly wired to the chiller to validate warranty.
(2) Not required with integral pump package fitted.

pLAN Termination

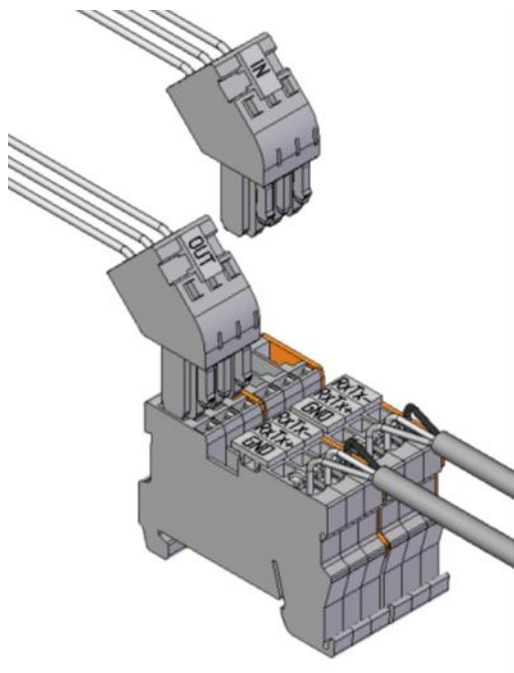

The plugged termination ensures that the connections are made simultaneously. Failure to attach the cables this way may cause damage to the controller.

Installation Data

ELECTRICAL DATA

IMPORTANT  The following information is for general guidance; the certified drawings provided must be referred to for installation.

| | | | LCC20 | LCC40 |
|--|-----|-----------------|-----------------------------|-------------|
| Unit Data | | | | |
| Nominal Run Amps | (1) | A | 14 | 28 |
| Maximum Start Amps | (2) | A | 103 | 117 |
| Permanent Supply | | VAC | 230 V 1 PH 50 Hz | |
| Mains Supply | | VAC | 400 V 3 PH 50 Hz | |
| Rec Permanent Fuse Size | | A | 16 | 16 |
| Rec Mains Fuse Size | | A | 25 | 40 |
| Max Permanent Incoming Cable Size | | mm ² | 4 mm ² terminals | |
| Max Mains Incoming Cable Size | | mm ² | 35 (Direct to Isolator) | |
| Control Circuit | | VAC | 24V/230VAC | |
| Evaporator | | | | |
| Pad Heater Rating | | W | 25 | 25 |
| External Trace Heating | | | | |
| Available (fitted by others) | | W | 500 | 500 |
| AC Condenser Fan - Per Fan | | | | |
| Quantity | | | 1 | 1 |
| Motor Size | | kW | 0.98 | 1.80 |
| Full Load Amps | | A | 1.75 | 3.80 |
| Locked Rotor Amps | | A | 6.20 | 11.00 |
| Compressor - Per Compressor | | | | |
| Quantity | | | 1 | 1 + 1 |
| Motor Size | | kW | 6.8 | 6.8 / 6.4 |
| Nominal Run Amps | (1) | A | 12.1 | 12.1 / 11.7 |
| Start Amps | (2) | A | 101 | 101 / 101 |
| Type Of Start | | | Direct on line | |
| OPTIONAL EXTRAS | | | | |
| Compressor Oil Heater Rating | | W | 70 | 70 / 70 |
| Electronic Soft-start | | | | |
| Nominal Run Amps | (1) | A | 14 | 28 |
| Maximum Start Amps | | A | 63 | 77 |
| Recommended Mains Fuse | | A | 25 | 40 |
| EC Condenser Fan - Per Fan | | | | |
| Quantity | | | 1 | 1 |
| Full Load Amps | | A | 3.20 | 4.80 |
| Motor Size | | kW | 1.95 | 3.1 |
| Water Pump | | | | |
| Single Head or Run/Standby - Standard | | | | |
| Unit Nominal Run Amps | (1) | A | 15 | 30 |
| Recommended Mains Fuse | | A | 25 | 40 |
| Motor Size | | kW | 0.37 | 0.50 |
| Full Load Amps | | A | 1.40 | 1.90 |
| Single Head or Run/Standby - Larger | | | | |
| Unit Nominal Run Amps | (1) | A | 16 | 31 |
| Recommended Mains Fuse | | A | 25 | 40 |
| Motor Size | | kW | 0.75 | 0.90 |
| Full Load Amps | | A | 2.30 | 3.00 |

- (1) To ARI standard conditions ARI 540 (7.2°C evaporating; 54.4°C condensing).
 (2) Starting amps refers to the direct on line connections.

AIRETronix Controls

GENERAL DESCRIPTION The **AIRETronix** microprocessor controller offers powerful analogue and digital control to meet a wide range of monitoring and control features including a real time clock and Industry standard communication port and network connections.

The controller's inbuilt display is used for viewing the unit operating status and making adjustments to control parameters by allowing the operator access to a series of display pages.

Also featured are a visual alarm and the facility to adjust and display control settings by local operator for information and control.

TEMPERATURE CONTROL

The unit has been designed to provide the cooling load required whilst optimising energy efficiency **at all times** and as such will take advantage of **free cooling** whenever available. If the free cooling available cannot satisfy the required full cooling load, DX mechanical cooling is used to supplement the output.

Airedale recognises that all chiller applications are different but fall mainly into 2 application categories; Variable Supply Temperature and Constant Supply Temperature.

The onboard microprocessor has the capability of satisfying either control requirement using the Airedale Variable Supply Temperature control scheme; energy savings are available when compared with previous schemes and that of the Constant Supply Temperature application.

Variable Supply Temperature control schemes offer energy savings where the supply water temperature is not critical to its operation. By monitoring the temperatures of the return and supply water the units cooling capacity is adjusted through use of the microprocessor controls to maintain an average temperature set point between the supply and return temperatures.

Selection of the best application control scheme can be made via a soft switch in the microprocessor during initial commissioning.


CAUTION  **Factory set to Variable Supply Temperature Control unless otherwise stated at order.**

Only when the mode selection has been set can the unit be enabled.

AIRETronix Controls

OPERATION

Display/keypad

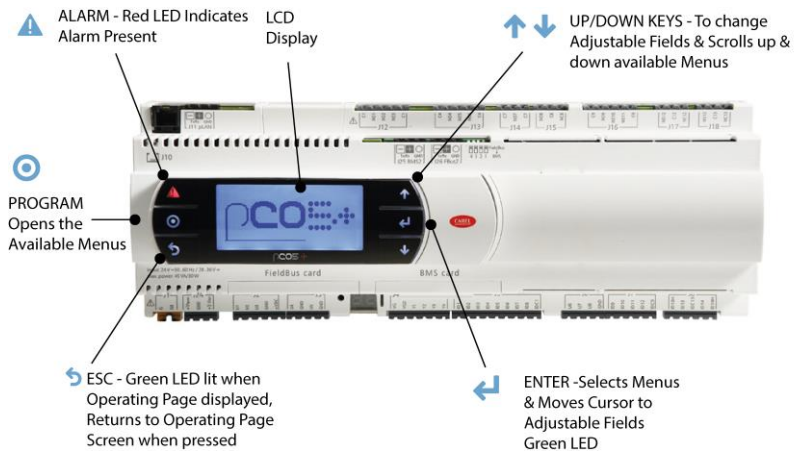

- 1 UP/DOWN KEYS - To change Adjustable Fields & Scrolls up & down available Menus
- 2 ENTER -Selects Menus & Moves Cursor to Adjustable Fields Green LED
- 3 ESC - Green LED lit when Operating Page displayed, Returns to Operating Page Screen when pressed
- 4 PROGRAM - Opens the Available Menus
- 5 ALARM - Red LED Indicates Alarm Present
- 6 4 ROW LCD DISPLAY
- 7 CURSOR (FLASHING) Top Left Position = "HOME" Indicates adjustable Fields

Navigation

The display is used for **Viewing Unit Operating Status** and **Adjusting Customer Control Settings** by allowing the operator access to a series of **Menus & sub-menus**. Viewing information is unrestricted, however set up and adjustment requires password entry, refer to **Password Protection**.

Initially, use the **Pg** key to **access Menus**, the symbol **←** will appear top right and the first menu will appear in CAPITALS, these **indicators** shows which menu is selected.

Use the **↓** **↑** keys to **move the indicator ←** to the desired menu and press **↵** to **open the menu**.

Use the **↵** key to **move the flashing cursor ||** to adjustable **fields** and the **↓** **↑** keys to change the values.

Press the **↵** key to **move the cursor** to the next **field** or **Home**.


When the cursor is **Home** either use the **↓** **↑** keys to scroll to next **sub-menu** or the **Esc** to **exit** and **return** to the **Standard Operating** page.


AIRETronix Controls

OPERATION

Standard Operating Page

The **Operating Page** will appear and remain present following start up of the controller as illustrated:

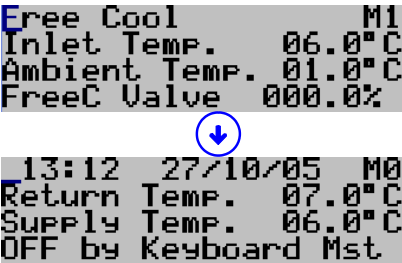

The following **Menus** can be accessed from the **Operating Page**, it is recommended that the display is always returned to the **Operating Page** by using the  key

Password Protection

To guard against unauthorised adjustments, a password is required to gain access to certain menus as defined below.

FACTORY SET PASSWORD PIN NUMBER: 4648 (or Customer chosen number).



When a password is requested use the   keys to enter the number and  to access the page.

Menus
(Listed in Sequence)

| Menu | Description | Password |
|---------------|--|---------------|
| Switch On/Off | Enable or Disable the unit | Open Access |
| Service | Allows selection of setpoint limits, enables unit on/off from display, remote on/off and remote pump on/off. | Default 4648 |
| Setpoint | Allows setpoint adjustment, includes supply temperature setpoint and unit temperature differential. | Default 4648 |
| Status | Displays current status on digital and analogue inputs and outputs. | Open Access |
| Maintenance | Displays hours run for compressors and pumps (if fitted). Also includes Electronic Expansion Valves (if fitted). | Default 4648 |
| Clock | Allows adjustment of real time clock, time zones | Default 4648 |
| Alarm Log | Display last 100 alarms in chronological order. | Open Access |
| Manufacturer | Factory use only. | Airedale Only |

SETTING UP

Unit ON/OFF

By pressing the  and  simultaneously for approximately 5 seconds, the unit operation will stop or start. The unit can also be enabled through the Switch On/Off menu.

Real Time Clock

The units leave the factory set, however follow the **Navigation** instructions if necessary.

Time Zones

The programme provides 3 On/Off periods per day, 7 days per week. The unit is factory set for continuous operation.

Technical Support

For further details, please contact Airedale.

AIRETronix Controls

VIEWING UNIT OPERATING STATUS

Status Menu

Allows access to view operating status of Digital and Analogue Inputs and Outputs.

Using the **Navigation** instructions, the following **Sub-Menus** shown in sequence can be accessed:

| 20kW Unit | | 40kW Unit | |
|------------------|---------------------------------------|---------------------------------------|--|
| Digital Inputs | | | |
| ID1 | Phase Rotation or MCCB Status | Phase Rotation or MCCB Status | |
| ID2 | Emergency Stop | Emergency Stop | |
| ID3 | Not Used | Not Used | |
| ID4 | Remote On/Off | Remote On/Off | |
| ID5 | Compressor 1 Contactor Status | Compressor 1 Contactor Status | |
| ID6 | Not Used | Compressor 2 Contactor Status | |
| ID7 | Digital Compressor Module Alarm | Digital Compressor Module Alarm | |
| ID8 | Not Used | Not Used | |
| ID9 | Low Pressure Switch | Low Pressure Switch | |
| ID10 | Not Used | Not Used | |
| ID11 | Pump 1 Contactor Status (Optional) | Pump 1 Contactor Status (Optional) | |
| ID12 | Pump 2 Contactor Status (Optional) | Pump 2 Contactor Status (Optional) | |
| ID13 | Remote Pump On/Off | Remote Pump On/Off | |
| ID14 | Remote Summer/Winter Or Night Setback | Remote Summer/Winter Or Night Setback | |
| ID15 | Not Used | Not Used | |
| ID16 | Not Used | Not Used | |
| ID17 | Not Used | Not Used | |
| ID18 | Not Used | Not Used | |
| Digital Outputs | | | |
| NO1 | Compressor 1 Contactor | Compressor 1 Contactor | |
| NO2 | Not Used | Compressor 2 Contactor | |
| NO3 | Pump 1 Contactor (Optional) | Pump 1 Contactor (Optional) | |
| NO4 | Not Used | Not Used | |
| NO5 | Not Used | Not Used | |
| NO6 | Pump 2 Contactor (Optional) | Pump 2 Contactor (Optional) | |
| NO7 | Condenser Coil Valve 1 | Condenser Coil Valve 1 | |
| NO8 | Condenser Coil Valve 2 | Condenser Coil Valve 2 | |
| NO9 | Condenser Coil Valve 3 | Condenser Coil Valve 3 | |
| NO10 | Not Used | Not Used | |
| NO11 | Not Used | Not Used | |
| NO12 | Non Critical Alarm | Non Critical Alarm | |
| NO13 | Critical Alarm | Critical Alarm | |
| NO14 | Evaporator Heater Pad | Evaporator Heater Pad | |
| NO15 | Not Used | Not Used | |
| NO16 | Not Used | Not Used | |
| NO17 | Not Used | Not Used | |
| NO18 | Not Used | Not Used | |
| Analogue Inputs | | | |
| B1 | Liquid Pressure | Liquid Pressure | |
| B2 | Leak Detector (Optional) | Leak Detector (Optional) | |
| B3 | Suction Pressure | Suction Pressure | |
| B4 | Return Water Temperature | Return Water Temperature | |
| B5 | Supply Water Temperature | Supply Water Temperature | |
| B6 | Not Used | Not Used | |
| B7 | Chilled Water Differential Pressure | Chilled Water Differential Pressure | |
| B8 | Remote Setpoint Adjustment | Remote Setpoint Adjustment | |
| B9 | Evaporator Inlet Water temperature | Evaporator Inlet Water temperature | |
| B10 | Ambient Temperature | Ambient Temperature | |
| Analogue Outputs | | | |
| Y1 | Free Cooling Valve | Free Cooling Valve | |
| Y2 | Condenser Fan Speed | Condenser Fan Speed | |
| Y3 | Digital Compressor | Digital Compressor | |
| Y4-Y6 | Not Used | Not Used | |

AIRETronix Controls

ALARMS

The controller logs and allows viewing of the last 100 conditions recorded in descending chronological order.

1

→ Alarm Log

2

→ Serious Flow Alrm

3

→ Alarm Active

3

→ 13:13

H002

27/10/05

1

Alarm Label

2

Alarm Status: Alarm Active or Alarm Cleared

3

Time of Alarm








4

The most current alarm is (Code) 001

5

Date of Alarm

Alarm Handling

- 1
- A **Red LED** behind the **Alarm**  key will light in the event of an alarm. To view the alarms, simply press the  key and the   keys to scroll through.
- 2
- Auto reset alarms will clear following this first depression of the **Alarm**  key. If however the **Red LED** behind the **Alarm**  key remains illuminated, the unit requires some form of manual reset.
- 3
- For manual reset alarms, isolate the affected circuits before further investigation.
- 4
- To reset or delete the alarms displayed in the alarm screen, simply press  again.

AIRETronix Controls

COMMON ALARMS

Outlined below is a selection of Common Alarms, a full list is available, please contact Airedale.

Phase Rotation or MCCB

A normally closed contact. When Phase Rotation is incorrect all controller outputs are de-activated.

Emergency Stop

A normally open contact. On closing, all controller outputs are de-activated.

Evaporator Flow Failure

A normally closed contact. On opening, all controller outputs are de-activated.

Low Supply Temperature

Supply Water Temperature Low Limit alarm is generated when the supply water temperature falls below the low limit value set. All controller outputs are de-activated.

INDIVIDUAL CIRCUIT ALARMS

Outlined below is a selection of Individual Circuit Alarms, a full list is, please contact Airedale.

Electronic Expansion Valve Failure

This indicates that the electronic expansion valve controller has detected an operating problem.

Low Suction Pressure

When the suction pressure sensor value falls below the value set by the low suction level for a period exceeding 1 minute (or 3 minutes on compressor start-up), a visual alarm will be generated at the in-built display and the relevant compressor will be de-activated. On units with tandem compressors, both compressors from the same circuit will be switched off.

High Liquid Pressure

When the liquid pressure reaches 25 Barg, the relevant circuit will be switched off and an alarm activated, this can only be rectified by manual reset via the microprocessor.

Compressor Status

A normally closed contact when the compressor is operating. If this contact remains open for a period of 3 seconds during operation of the compressor, a visual alarm is generated and the relevant compressor will be de-activated. This alarm comprises of compressor motor protection module, discharge gas thermostat and safety high pressure switch.

Commissioning Data

OPERATING LIMITS

(20% Ethylene Glycol Concentration)

| Standard Unit | |
|--------------------------------------|---|
| Minimum Ambient Air DB °C | -20°C |
| Maximum Ambient Air DB °C | Refer to Technical Manual - Performance Data |
| Minimum Leaving Water Temperature °C | +5°C |
| Maximum Return Water Temperature °C | +20°C |
| Minimum / Maximum ΔT | 4°C / 8°C |

1 For conditions outside those quoted, please refer to Airedale.


MECHANICAL DATA

| | LCC20 | LCC40 |
|-------------------------------|----------------------------------|-------------------------------|
| Compressor | Single | Tandem |
| Type | Digital Scroll | 1 Digital + 1 Standard Scroll |
| Quantity | 1 | 2 |
| Oil Charge Volume (Total) l | 1.69 | 1.69 |
| Oil Type | Polyol Ester | |
| Refrigeration | Dual Circuit | |
| Refrigerant Control | Electronic Expansion Valve (EEV) | |
| Refrigerant Type - Precharged | R410A | |
| Charge (Total) kg | 6.8 | 10.3 |


All performance data is supplied in accordance with BS EN 14511-1:2013

Commissioning Data

WATERSIDE PRESSURE DROPS
(20% Ethylene Glycol Concentration)


CAUTION  Full design water flow **MUST** be maintained at all times. Variable water volume is **NOT** recommended and will invalidate warranty

Unit Pressure Drop

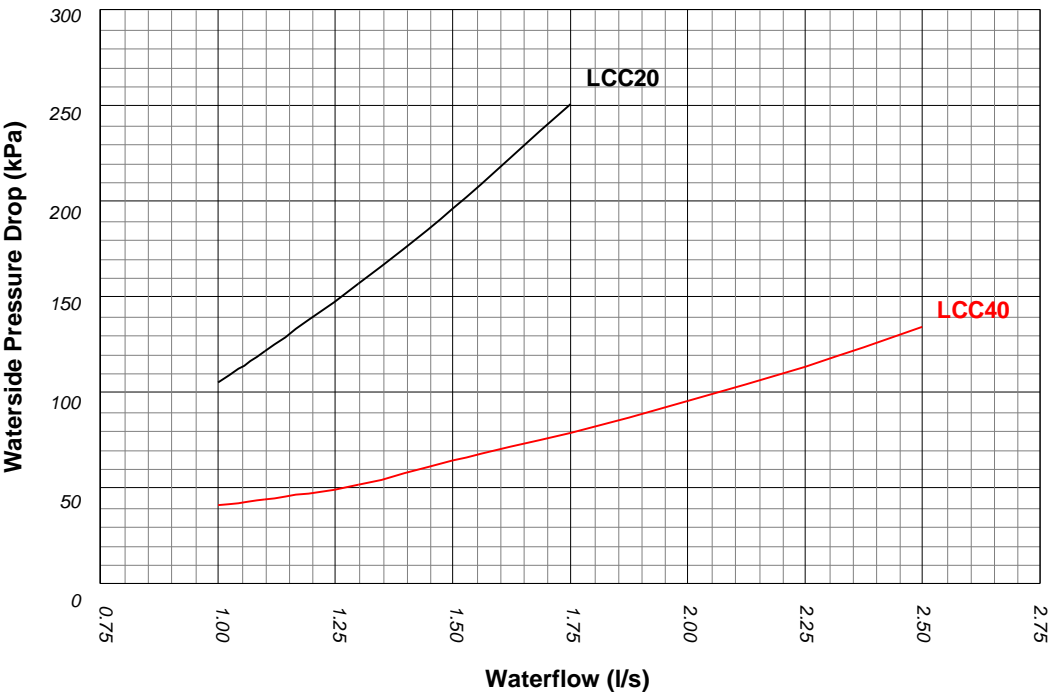

- (1) For glycol solutions, please refer to **Glycol Data**.
- (2) Chiller pressure drop refers to standard unit.

Unit Evaporator Pressure Drop

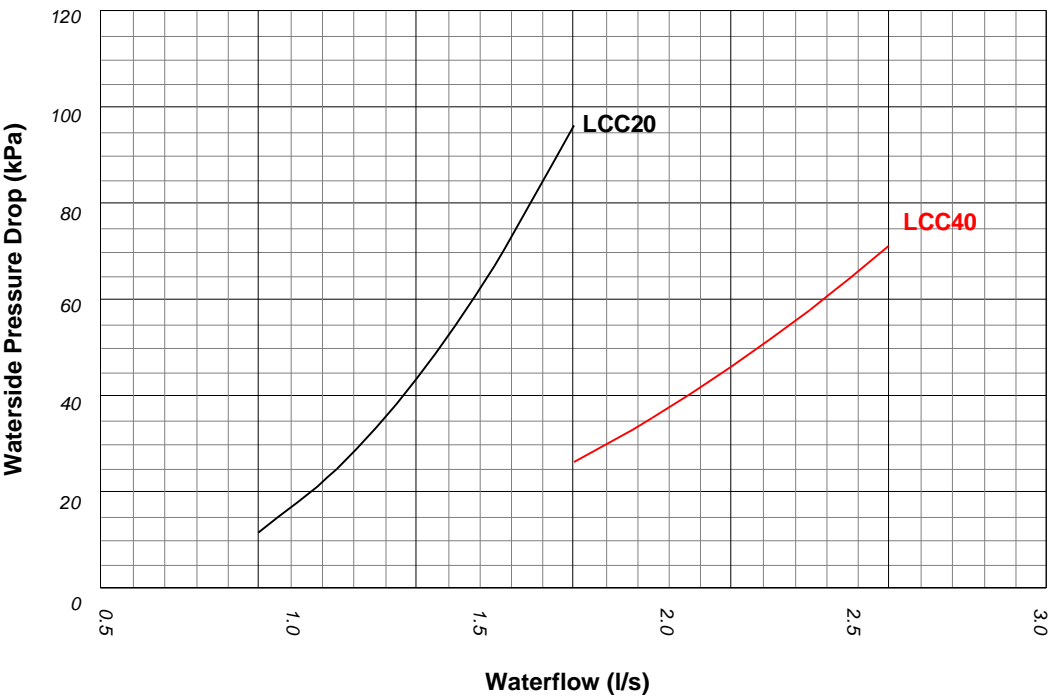

Commissioning Data

PUMP PACKAGES
(OPTIONAL EXTRAS)

Use the formula below and the graphs provided to calculate the External Head Available:

Example:
Model Ref. = **LCC40**
Ambient: = 35°C
Fluid = 20% Ethylene Glycol
Inlet Fluid = 7°C
Outlet Fluid = 12°C (**5°C ΔT**)
Pump Selection = Single Standard
Water Flow l/s = 1.87 l/s

EHA (kPa) = External Head Available

EHA (kPa) = { Total Pump Head Available - Unit Waterside Pressure Drop }



EHA (kPa) = { 165 - 82 }

EHA (kPa) =

83 kPa

Commissioning Data

PUMP PACKAGES (OPTIONAL EXTRAS)

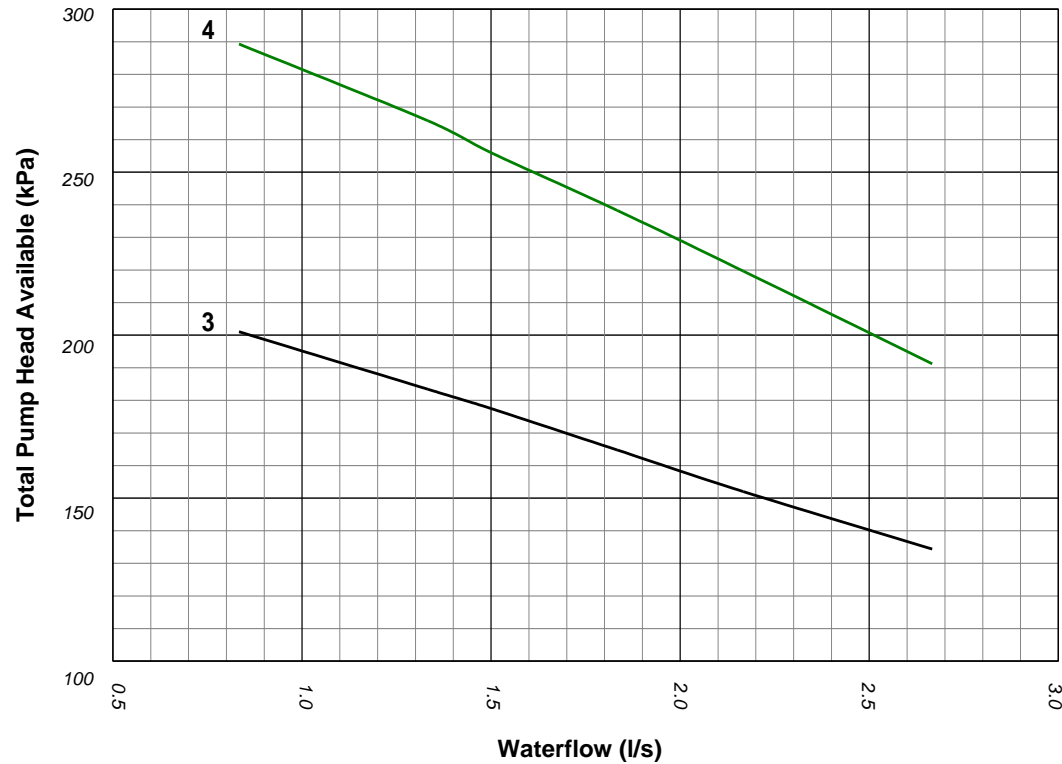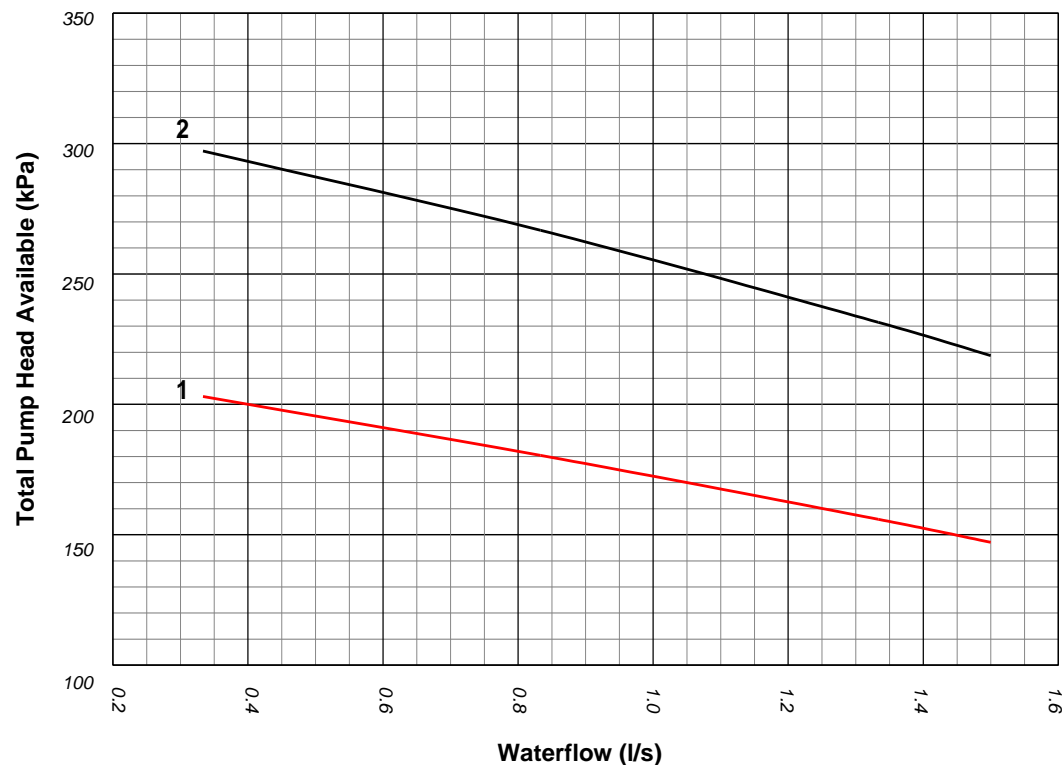


| | | Single Head Pump or Run / Standby Pump | |
|-------|-------|--|--------|
| | | Standard | Larger |
| LCC20 | Curve | 1 | 2 |
| LCC40 | Curve | 3 | 4 |

Commissioning Data

OPERATIONAL SEQUENCE

Refrigerant Charge Check for the presence of a refrigerant charge in the condenser side.

Compressor Oil Heater The mains supply to the compressor oil heater should be switched on at least 12 hours prior to compressor starting to avoid refrigerant migration.

CAUTION  **A separately fused, locally isolated, permanent single phase and neutral supply MUST BE FITTED for the compressor oil heater (if fitted), evaporator trace heating and control circuits, FAILURE to do so could INVALIDATE WARRANTY.**

Pre-Start-Up Check Before compressor start-up, make sure that an oil level is showing in the compressor sight glass, and that all refrigerant ball valves are opened.

CAUTION  **Check phase rotation by connecting pressure gauges to the suction and discharge ports, if no differential pressure occurs, isolate immediately.**

Adding Refrigerant The unit is supplied with a full refrigerant charge, additional refrigerant should be added to the system via 1/4" Schrader connection on the expansion line if required.

Pump Down Never pump down without the low pressure trip and high discharge temperature switches being operative.

UNLOADING PROTECTION


Head Pressure The microprocessor has inbuilt protection against nuisance trips. If the head pressure rises above 35Barg the system will unload 1 compressor and remain unloaded until the head pressure drops below 33Barg.

Low Pressure If low pressure drops below the microprocessor setting, the compressor will unload to 1 compressor, if low pressure persists for 1 minute, the circuit will be switched off and sound an alarm.

Commissioning Procedure

GENERAL

To be read in conjunction with the commissioning sheets provided, items highlighted should be recorded.

CAUTION  Please ensure all documents have been completed correctly and return to Technical Support immediately to validate warranty.

PRE COMMISSIONING CHECKLIST

CAUTION  ALL work **MUST** be carried out by technically trained competent personnel.



The equipment contains live electrical and moving parts, **ISOLATE** prior to maintenance or repair work.

The door interlocking mains isolator should be in the **OFF** position.

Ensure all items listed in the pre commissioning section are complete.

RECORD

The unit should be visually inspected and any damage noted.






- Secure commissioning gauges to the high side of the system, check for a positive charge
- Check tightness of electrical components and properly terminated
- Check that the remote on/off switch (if fitted) is in the off position
- With the MCBs in the off position measure the incoming voltage
- Check Phase Rotation
- Check voltage at permanent supply
- Measure and record the primary (230V) and secondary (24V) voltages at each of the transformers, adjust tapping if necessary and record on the commissioning document
- Check all timer settings are correct
- Check compressor oil heater (if fitted) (ensure this is switched on for a minimum of 12 hours prior to the unit operation)
- Check oil level of each compressor
- Check water filter is fitted
- Check design water flow is available
- Check flow proving device and pump interlocks are fitted to the water system and wired directly to the chiller
- Switch on the controls and individual circuits, primary and secondary, MCBs to the ON position, at this stage the control display panel should be illuminated
- Record Optional Extras
- Record Controller Data

CAUTION  Disable remote **ON/OFF** to ensure the unit does not start unintentionally.

The chiller will not start until microprocessor control **SWITCH 1** is in the **ON** position. **DO NOT SWITCH TO ON AT THIS STAGE**

- Adjust the water temperature supply and return set points (if necessary) to call for 100% cooling (refer to the **Controls** section)
- Ensure all **KNOBS** and **SWITCHES** are adjusted to suit the design requirements (refer to the **Controls** section)

To switch the unit **ON**, use the microprocessor keypad as follows:


Press  , press  , press  , press  & finally .

CAUTION  There will always be a delay between the enabling of the unit and the energising of the compressor contactors, anything between 1 to 2 minutes. Be patient.

Commissioning Procedure

PRE COMMISSIONING CHECKLIST

- Check that each circuit trips on low pressure, the alarm should appear within 3 minutes
- The alarm will be recognised at the display circuit trip, to clear the alarms refer to **Alarm Handling**

CAUTION  Prior to the chiller compressors being allowed to start, the **Water Flow Fail** and **Pump Interlock** features **MUST** both be proven to work correctly.

- To check the water flow fail safety protection is working satisfactorily:

RECORD 

Reduce the flow rate to 75% of design and ensure that the evaporator pressure or flow protection device initiates a trip at this flow rate, adjust as necessary.






With compressors off, ensure this alarm is recognised as **Water Flow Fail** at the display and disengages the circuits operation immediately. Restore flow rate to the design and check the alarm has self-cleared.

- To check the pump interlock safety feature works satisfactorily:

RECORD 

Switch off the chiller water pump and check the interlock wiring connections at the chiller are open circuit.


To switch the unit OFF, use the microprocessor keypad as follows:

Press  , press  , press  , press  & finally  .

Fully open all liquid line and discharge service ball valves on each circuit.

Commissioning Procedure






COMMISSIONING CHECKLIST

IMPORTANT  The digital scroll compressor is always operating at either 100% or 0% mass flow. When inspecting the refrigerant system with gauges, this is evident by pulsing of the system pressures. All pressure measurements **MUST** be taken when the digital scroll compressor is compressing refrigerant (solenoid de-energised).

The following should be carried out with a load on the system, otherwise the unit is likely to short cycle.

- Switch the door interlocking mains isolator to the ON position but again only on the circuit which is to be tested
- Adjust the water temperature supply and return set points to match the system requirements

To switch the unit ON, use the microprocessor keypad as follows:


Press , press , press , press  & finally .

- Check pressures at suction and discharge ports for correct phase rotation

CAUTION  If no differential pressure occurs, isolate immediately.

RECORD 

- Measure and record the compressor amps once the compressors are fully loaded
- Measure and record full speed amps of each condenser fan(s)

CAUTION  The microprocessor LP setting is adjustable via the micro display. It is recommended that this setting be 0.4Bar below the equipment freezing point of the cooling medium ie:






with a 20% Ethylene Glycol water concentration LP micro settings is 1.9BarG.

- Ensure that the low water temperature safety cuts out at the correct setting +/- 0.5°C, to clear the alarms refer to **Alarm Handling** section

RECORD 

- Check the liquid line sight glass is clear and dry
- Check the superheat is between 5 - 8°C at all operating loads
- Check and record the following:
Suction and discharge pressures
Liquid, discharge and suction line temperature
Water inlet and outlet temperature
- Ensure the above are all within the design parameters
- Repeat as follows for each circuit:

To switch the unit OFF, use the microprocessor keypad as follows:

Press , press , press , press  & finally .


- To switch the unit ON, repeat above

The unit is now commissioned and will provide many years of trouble free operation providing the following maintenance schedule is followed.

Maintenance

CAUTION  ALL work **MUST** be carried out by technically trained competent personnel.

 The equipment contains live electrical and moving parts, **ISOLATE** prior to maintenance or repair work.

IMPORTANT  **UK MAINLAND - The Chiller Maintenance Record and supporting maintenance documents MUST be complete and available on request to validate warranty.**

The Chiller Maintenance Record is located within the unit control panel.

GENERAL MAINTENANCE

The maintenance schedule indicates the time period between maintenance operation.

| 3 MONTHS | ACTION | NOTES |
|----------------------|--|---|
| REFRIGERATION | <p>Check the following and compare results with commissioning records.</p> <ul style="list-style-type: none"> Suction and discharge readings Head pressure control is maintained Pressure relief indicator gauge Check each circuit sight glass for dryness and bubbles for indication of leaks Check compressor oil level and shell/sump temperature Visually inspect the unit for oil patches | <p>Investigate and rectify variations.</p> <p>Remember to re-cap the Schrader connections!</p> <p>Investigate and repair possible leaks.</p> |
| SYSTEM | <p>Check the following against the commissioning records.</p> <ul style="list-style-type: none"> Control settings Alarm log for unusual occurrences Chilled water control maintains design temperature Chilled water flow is within design limits of zero to plus 10% Concurrently ensure chilled water pump and flow proving device operate efficiently, and that interlocks function correctly Operation of flow proving device and pump interlock | <p>Investigate and adjust as necessary.</p> |
| Finally! | Record operating conditions. | |
| FABRIC | <p>Visually inspect the unit for general wear and tear, treat metalwork.</p> <p>Visually inspect pipe and pipework insulation.</p> <p>Clean evaporator water strainer.</p> <p>Clean condenser coils. Do not steam clean use detergent and stiff bristled brush. For heavy dirt, use either a high pressure water or chemical hose.</p> <p>Visually check the following:</p> <ul style="list-style-type: none"> Pipework clamps are secure Tightness and condition of fan and compressor mounts Anti-Vibration mounts fixings (if fitted) | <p>Rust should be inhibited, primed and touched up with matching paint (available from Airedale or your Distributor).</p> <p>Repair/rectify as necessary.</p> <p>At first maintenance visit and then as frequently as necessary (12 months).</p> <p>Do not damage fins and comb out if necessary.</p> <p>Secure/tighten as necessary.</p> |
| Finally! | Ensure control panel lids and access panels have been correctly replaced and securely fastened in position. | |

Maintenance

GENERAL MAINTENANCE

| 6 MONTHS | ACTION | NOTES |
|---------------|--|---|
| SYSTEM | Repeat 3 month checks plus the following: | |
| | Check evaporator trace heating and low ambient thermostat are set to activate at 4.0°C. | Remember to re-cap the Schrader connections! |
| 12 MONTHS | ACTION | NOTES |
| SYSTEM | Repeat 6 month checks plus the following: | |
| | Check safety devices cut out the compressor at the correct settings. | |
| REFRIGERATION | Check glycol concentration if appropriate. | Adjust as necessary. |
| | Leak test all refrigerant joints and inspect all water connections. | Rectify as necessary. |
| | Check superheats with chiller running on full load (the height of summer is recommended). Recheck the charge following major adjustment of the superheats. | Adjust as necessary. A period of 30 minutes should be allowed between each resetting of the valve to allow pressures to stabilise. Thermostatic expansion valve only. |
| ELECTRICAL | Tighten all electrical terminals. | |

COMPRESSOR MAINTENANCE

Periodic maintenance and inspection of this equipment is necessary to prevent premature failure, the following periodic inspections should be carried out by period or hourly use which ever is sooner.

| | |
|-------------------------------|--------------------------------------|
| 1 Year | Measure compressor motor insulation. |
| 7,500 Hours or 4 Years | Inspect compressor oil. |

SHUT DOWN PERIODS

For periods of winter shut down the following precautions are recommended:

- Close the liquid and discharge ball valve
- Cap service ports
- Turn off electrical circuits
- Drain the water from the chiller evaporator via the evaporator drain plug

Notes:

Notes:

Parts Identification

SPARES

For ease of identification when ordering spares or contacting Airedale about your unit, please quote the unit type, unit serial number and the date of manufacture, which can be found on the unit serial plate.

A spares list for 1, 3 and 5 years will be supplied with every unit and is also available from our Spares department on request.




The serial plate can be located inside Item 1.

UK MAINLAND - Chiller Maintenance Record can be located inside Item Electrical Panel or **No 1**.

LCC20 Shown

- 1 Control Panel Access
- 2 Door Interlocking Mains Isolator
- 3 Incoming Customer Mains supply
- 4 Mains / Control Panel**
- 5 Compressor Compartment**
- 6 Fan Speed Controller (located to Mains Panel (4) in LCC40)
- 7 High Pressure Switch
- 8 Compressor
- 9 Low Pressure Switch
- 10 Electronic Expansion Valve (EEV)
- 11 Microprocessor Controller
- 12 Digital Compressor EEV Controller
- 13 Transformer
- 14 Mixing Valve
- 15 Manual Balancing Valve
- 16 Flushing Bypass
- 17 Suction Pressure Transducer
- 18 Liquid Line Sight Glass
- 19 Liquid Line Filter Drier
- 20 Auto Pressurisation Air Vent
- 21 Condenser Coil Guard
- 22 Water Supply - BSP Male Connection
- 23 Water Return - BSP Male Connection
- 24 Removable Lifting Eye Bolts
- 25 Unit Drain Point Access

Parts Identification

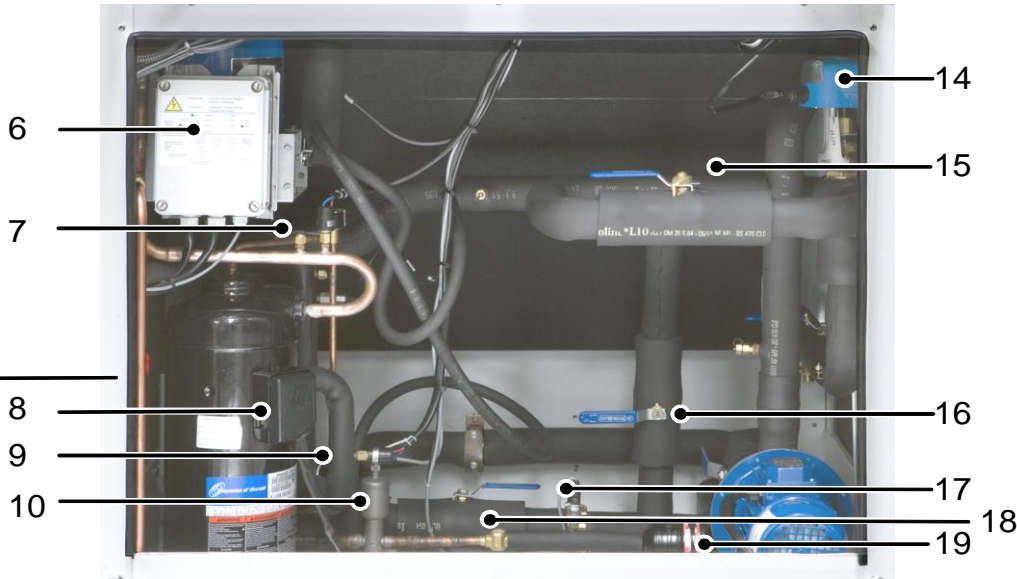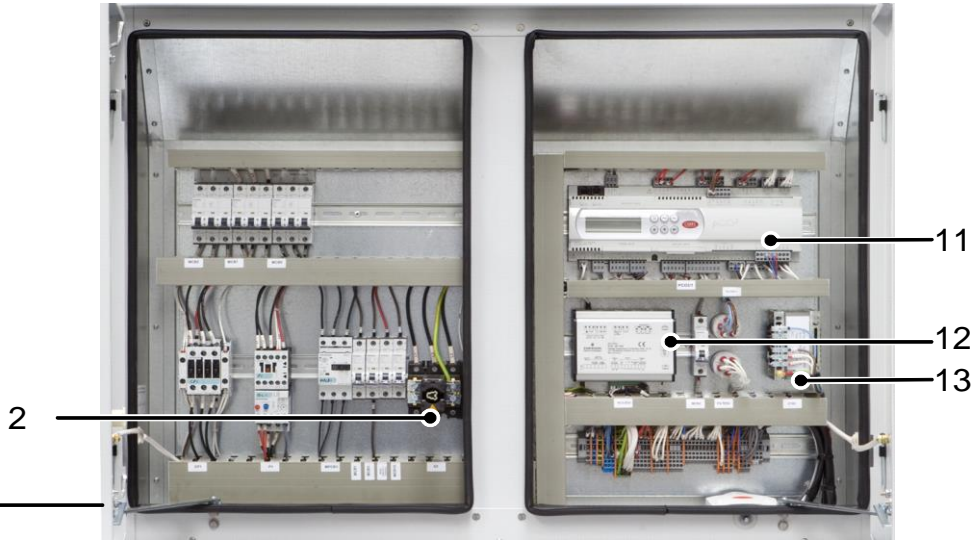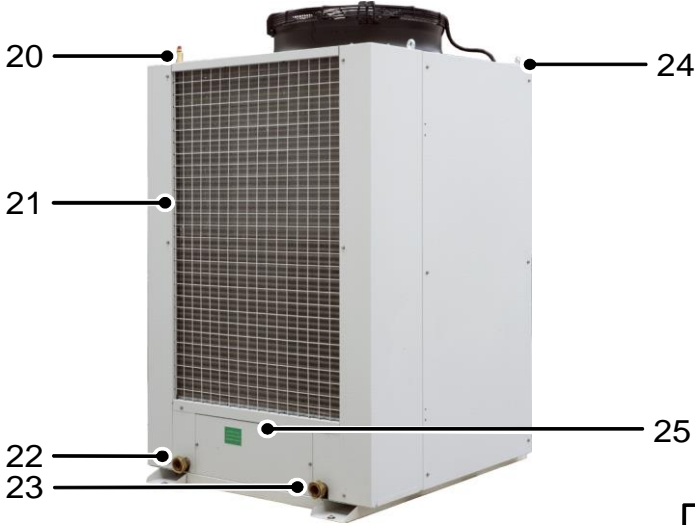



Head Office:

Airedale International Air Conditioning Ltd
Leeds Road
Rawdon
Leeds LS19 6JY
United Kingdom

Tel: +44 (0) 113 239 1000
Fax: +44 (0) 113 250 7219

e-mail: enquiries@airedale.com
website: www.airedale.com



| PART NO: | ISSUE | DATE |
|----------|--------|------------|
| 6560544 | A | 01/06/2007 |
| | B | 04/2011 |
| | C | 09/2012 |
| | V1.3.0 | 02/2013 |
| | V1.4.0 | 07/2014 |
| | V1.5.0 | 10/2014 |
| | V1.6.0 | 12/2015 |
| | V1.7.0 | 04/2016 |
| | V1.8.0 | 05/2016 |