



Condensing Units

CUS5-12



TECHNICAL MANUAL

Original Instructions



FM00542

EMS52086

Customer Services

Warranty, Commissioning & Maintenance

As standard, Airedale guarantees all non consumable parts only for a period of 12 months, variations tailored to suit product and application are also available; please contact Airedale for full terms and details.

To further protect your investment in Airedale products, Airedale can provide full commissioning services, comprehensive maintenance packages and service cover 24 hours a day, 365 days a year (UK mainland).

For a free quotation contact Airedale or your local Sales Engineer.

All Airedale products are designed in accordance with EU Directives regarding prevention of build up of water, associated with the risk of contaminants such as legionella.

For effective prevention of such risk it is necessary that the equipment is maintained in accordance with Airedale recommendations.

ChillerGuard

In addition to commissioning, a 24 hour, 7 days a week on-call service is available throughout the year to UK mainland sites. This service will enable customers to contact a duty engineer outside normal working hours and receive assistance over the telephone. The duty engineer can, if necessary, attend site, usually within 24 hours or less.

Full details will be forwarded on acceptance of the maintenance agreement.

CAUTION ⚠

Warranty cover is not a substitute for maintenance. Warranty cover is conditional to maintenance being carried out in accordance with the recommendations provided during the warranty period. Failure to have the maintenance procedures carried out will invalidate the warranty and any liabilities by Airedale International Air Conditioning Ltd.

Spares

A spares list for 1, 3 and 5 years will be supplied with every unit and is also available from our Spares department on request.

Training

As well as our comprehensive range of products, Airedale offers a modular range of Refrigeration and Air Conditioning Training courses, for further information please contact Airedale.

Customer Services

For further assistance, please e-mail: enquiries@airedale.com or telephone:

UK Sales Enquiries	+ 44 (0) 113 239 1000	enquiries@airedale.com
International Enquiries	+ 44 (0) 113 239 1000	enquiries@airedale.com
Spares Hot Line	+ 44 (0) 113 238 7878	spares@airedale.com
Airedale Service	+ 44 (0) 113 239 1000	service@airedale.com
Technical Support	+ 44 (0) 113 239 1000	tech.support@airedale.com
Training Enquiries	+ 44 (0) 113 239 1000	training@airedale.com

For information, visit us at our web site: www.airedale.com

Airedale Ltd. endeavours to ensure that the information in this document is correct and fairly stated, but none of the statements are to be relied upon as a statement or representation of fact. Airedale Ltd. does not accept liability for any error or omission, or for any reliance placed on the information contained in this document. The development of Airedale products and services is continuous and the information in this document may not be up to date. It is important to check the current position with Airedale Ltd. at the address stated. This document is not part of a contract or licence unless expressly agreed. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or information storage and retrieval systems, for any purpose other than the purchaser's personal use, without the express written permission of Airedale Ltd.

©2019 Airedale International Air Conditioning Limited. All rights reserved. Printed in the UK.

Health and Safety

IMPORTANT

The information contained in this manual is critical to the correct operation and maintenance of the unit and should be read by all persons responsible for the installation, commissioning and maintenance of the Airedale unit.

Safety

The equipment has been designed and manufactured to meet international safety standards but, like any mechanical/ electrical equipment, care must be taken if you are to obtain the best results.

CAUTION ⚠	<p>When working with any air conditioning units ensure that the electrical isolator is switched off prior to servicing or repair work and that there is no power to any part of the equipment.</p> <p>Also ensure that there are no other power feeds to the unit such as fire alarm circuits, BMS circuits etc.</p> <p>Electrical installation commissioning and maintenance work on this equipment should be undertaken by competent and trained personnel in accordance with local relevant standards and codes of practice.</p>
------------------	---

The refrigerant used in this range of products is classified under the COSHH regulations as an irritant, with set Workplace Exposure Levels (WEL) for consideration if this plant is installed in confined or poorly ventilated areas. A full hazard data sheet in accordance with COSHH regulations is available should this be required.

Protective Personal Equipment

Airedale recommends that personal protective equipment is used whilst installing, maintaining and commissioning equipment.

Refrigerant Warning

This Airedale unit uses R407C refrigerant which requires careful attention to proper storage and handling procedures. Use only manifold gauge sets designed for use with R407C refrigerant. Use only refrigerant recovery units and cylinders designed for high pressure refrigerants. R407C must only be charged in the liquid state to ensure correct blend makeup. The refrigerant must be stored in a clean, dry area away from sunlight and must never be stored above 50°C.

Global Warming Potential

The R407C refrigerant has a GWP of 1774 (based on EN378-1:2016, 100 year life).

Pressure Equipment Directive (2014/68/EU)

Minimum and Maximum Operation Temperature (TS) and Pressure (PS)

Refrigeration

Allowable Temperature Range (TS) = Min -20°C* to Max 120°C**

Maximum Allowable Pressure (PS) = High Side 40.7 Barg, Low Side N/A Barg

*Based on the refrigerant temperature in the unit off state in the lowest permitted ambient temperature.

**Based on the maximum allowable super-heated refrigerant temperature.

Manual Handling

Some operations when servicing or maintaining the unit may require additional assistance with regard to manual handling. This requirement is down to the discretion of the engineer. Remember do not perform a lift that exceeds your ability.

Pressure System Safety Regulations 2000

Refrigeration assemblies/systems may constitute a Pressure System as defined in the Pressure System Safety regulations 2000.

Dangerous Substances and Explosive Atmospheres Regulations

The completion of a DSEAR (Dangerous Substances and Explosive Atmospheres Regulations) risk assessment must be completed as a legal requirement by the employer of the business where this equipment will be installed. This is not the responsibility of Airedale International Air Conditioning Ltd to undertake as the manufacturer of the equipment.

Environmental Policy

It is our policy to:

- Take a proactive approach to resolve environmental issues and ensure compliance with regulatory requirements
- Train personnel in sound environmental practices
- Pursue opportunities to conserve resources, prevent pollution and eliminate waste
- Manufacture products in a responsible manner with minimum impact on the environment
- Reduce our use of chemicals and minimise their release to the environment
- Measure, control and verify environmental performance through internal and external audits
- Continually improve our environmental performance

CE Directive

Airedale certify that the equipment detailed in this manual conforms with the following EC Directives:

Electromagnetic Compatibility Directive (EMC)	2014/30/EU
Machinery Directive (MD)	89/392/EEC version 2006/42/EC
Pressure Equipment Directive (PED)	2014/68/EU

To comply with these directives appropriate national & harmonised standards have been applied. These are listed on the Declaration of Conformity, supplied with each product.

General Description	6
Introduction	6
Capacity Data	8
COOLING duty - Cooling Only Units	8
HEATING duty - Reverse cycle mode	10
Technical Data	11
Mechanical	11
Electrical Data	12
Sound Data	13
Operating Data	14
Operating Limits - Cooling Only	14
Operating Limits - HEAT PUMP	14
Installation	15
Dimensions: CUS/CUHS 5 - 7.5	15
Dimensions: CUS/CUHS 10 - 12	16
Field Connections	17
CUS 5-12	17
CUHS 5-12	17

General Description

Introduction

This range of air cooled condensing units and heat pumps covers the 14-35kW requirement, in axial fan only. The range is custom designed for use with Airedale's comprehensive range of close control units and Comfort Modular units. They can also be used in conjunction with other cooling applications, eg air handling units. All units are leak tested and carry a holding charge of inert gas.

Construction

The units are constructed of corrosion resistant pre-coated sheet steel. Standard unit colour is Light Grey (RAL 7035)

Nomenclature

	C U	H	S	1-4
C U	Condensign Unit Cooling Only			
H	Outdoor Heat Pump			
S	Scroll Compressor (model sizes 2-4)			
5-12	Model Size			

Standard Features

Condenser

Large surface area condenser coil(s) manufactured from refrigeration quality copper tubes, with mechanically bonded aluminium fins.

Fan

610mm diameter axial flow fan assembly(s) with low noise paddle type blades. The external rotor motor design allows the use of a low power output single phase speed controllable motor. The motor has inbuilt thermal overload protection, and the assembly is supplied complete with a finger guard for protection.

Compressor

All units utilise hermetic scroll compressors. The CUS7.5/10 and 12 models are fitted with a crankcase heater to guard against floodback and oil foaming on start up. Other features include internal motor protection

Refrigeration

Cooling Only

Each unit is fitted with a liquid and suction line shut off valve for ease of maintenance and installation. Factory set HP/LP pressure switches are fitted, with manual reset high pressure cut-out and automatic reset low pressure cut-out.

Refrigeration

Heat Pump

Each unit is fitted with a thermostatic expansion valve and a check valve assembly to prevent short circuiting of refrigerant, together with a large capacity suction accumulator and a reversing valve. A factory set defrost switch facilitates defrosting of the outside coil when in heat pump mode. All heat pump compressors are fitted with crankcase (oil sump) heaters.

Factory set HP/LP pressure switches are fitted, with manual reset high pressure cut-out and automatic reset low pressure cut-out.

A bi-directional filter drier is supplied loose for on site installation.

Electrical

Weatherproof control panels are accessed via a lockable panel and contain the necessary contactors, sub-circuit protection and terminals. All wiring is colour coded and numbered for identification. All units are wired in accordance with current local and European standards. This system has been designed to be connected to a TN type distribution system. For alternate distribution type systems, contact Airedale.

Head Pressure Control

Head pressure is maintained by a factory fitted, pressure actuated head pressure controller which varies the speed of the fan to provide optimum head pressure control under varying ambient conditions.

Mains Isolator

A weatherproof mains isolator is fitted to ensure mains isolation of the electrical panel.

Fan Motor & Assembly

The axial flow fan assembly has low noise sickly type blades and an inlet ring.

The external rotor motor allows the use of a low power output, single phase and speed controllable motor to power the fan. The motor has inbuilt thermal overload protection and the assembly is supplied complete with a finger guard for protection.

OPTIONS

Epoxy Coated Coils

In atmospheres where high corrosion is anticipated epoxy coated aluminium finned coils can be supplied.

Hot Gas Bypass (Cooling Only Units)

To achieve capacity control during low load conditions, a factory fitted hot gas bypass valve is fitted. This will modulate down to 40% of full capacity. A stub is provided for site connection of the hot gas line to the local expansion device.

Compressor Anti-Cycle Timer

To prevent short cycling and subsequent additional wear on the compressor, this option can be factory fitted to limit compressor starts to six per hour. Not required on Airedale equipment featuring start delay timers inbuilt into the Air Handling unit.

Defrost Drain Tray (Heat Pump Only)

An insulated and trace heated drain tray can be provided to collect condensate when units are used in the reverse cycle/defrost mode.

Capacity Data

COOLING duty - Cooling Only Units

	Evaporating Temperature °C	Ambient									
		25°C	30°C		35°C		40°C		45°C		
		Output kW	Input kW	Output kW	Input kW	Output kW	Input kW	Output kW	Input kW	Output kW	Input kW
CUS5	-5	10.83	2.65	10.21	3.07	9.61	3.49	9.06	3.91	8.40	4.33
	0	12.99	2.88	12.28	3.28	11.57	3.67	10.89	4.07	10.21	4.50
	5	15.26	3.13	14.48	3.51	13.73	3.89	12.95	4.27	12.17	4.72
	10	17.64	3.43	16.82	3.80	16.00	4.17	15.16	4.54	14.35	4.99
CUS6	-5	14.31	4.00	13.60	4.54	12.88	5.07	12.16	5.61	11.21	6.21
	0	17.09	4.30	16.16	4.81	15.23	5.32	14.28	5.84	13.31	6.46
	5	19.86	4.60	18.87	5.11	17.90	5.62	16.84	6.18	15.57	6.75
	10	22.86	4.93	21.81	5.43	20.77	5.94	19.57	6.51	18.43	7.07
CUS6.5	-5										
	0										
	5										
	10										
CUS7.5	-5	16.67	4.81	15.79	5.47	14.86	6.12	13.96	6.77	12.98	7.49
	0	19.85	5.08	18.83	5.71	17.84	6.36	16.84	7.00	15.64	7.76
	5	23.39	5.39	20.21	6.00	21.04	6.60	19.81	7.26	18.57	7.99
	10	27.19	5.67	25.89	6.24	24.58	6.82	23.14	7.54	21.78	8.19
CUS10	-5	22.15	5.27	20.88	6.21	19.66	7.14	18.41	8.07	17.17	9.01
	0	26.12	5.56	24.90	6.47	23.61	7.38	22.38	8.29	21.12	9.22
	5	33.92	5.94	30.66	6.73	27.41	7.52	24.14	8.30	21.79	9.17
	10	35.89	6.14	34.60	7.00	33.32	7.87	31.98	8.73	30.52	9.69
CUS12	-5	28.25	7.81	26.80	8.83	25.35	9.86	23.94	10.89	22.38	11.97
	0	33.54	8.35	31.95	9.32	30.30	10.30	28.69	11.27	26.87	12.35
	5	39.30	8.85	37.52	9.82	35.73	10.79	33.91	11.78	31.86	12.89
	10	45.68	9.53	43.74	10.14	41.78	10.74	39.62	11.98	37.23	13.37

Notes:

- 1 Output kW refers to the compressor duty.
- 2 Input kW refers to the compressor input power only

Capacity Data

COOLING duty – Reverse cycle mode

	Evaporating Temperature °C	Ambient									
		25°C	30°C		35°C		40°C		45°C		
		Output kW	Input kW	Output kW	Input kW	Output kW	Input kW	Output kW	Input kW	Output kW	Input kW
CUS5	-5	10.83	2.65	10.21	3.07	9.61	3.49	9.06	3.91	8.40	4.33
	0	12.99	2.88	12.28	3.28	11.57	3.67	10.89	4.07	10.21	4.50
	5	15.26	3.13	14.48	3.51	13.73	3.89	12.95	4.27	12.17	4.72
	10	17.64	3.43	16.82	3.80	16.00	4.17	15.16	4.54	14.35	4.99
CUS6	-5	14.31	4.00	13.60	4.54	12.88	5.07	12.16	5.61	11.21	6.21
	0	17.09	4.30	16.16	4.81	15.23	5.32	14.28	5.84	13.31	6.46
	5	19.86	4.60	18.87	5.11	17.90	5.62	16.84	6.18	15.57	6.75
	10	22.86	4.93	21.81	5.43	20.77	5.94	19.57	6.51	18.43	7.07
CUS6.5	-5										
	0										
	5										
	10										
CUS7.5	-5	16.67	4.81	15.79	5.47	14.86	6.12	13.96	6.77	12.98	7.49
	0	19.85	5.08	18.83	5.71	17.84	6.36	16.84	7.00	15.64	7.76
	5	23.39	5.39	20.21	6.00	21.04	6.60	19.81	7.26	18.57	7.99
	10	27.19	5.67	25.89	6.24	24.58	6.82	23.14	7.54	21.78	8.19
CUS10	-5	22.15	5.27	20.88	6.21	19.66	7.14	18.41	8.07	17.17	9.01
	0	26.12	5.56	24.90	6.47	23.61	7.38	22.38	8.29	21.12	9.22
	5	33.92	5.94	30.66	6.73	27.41	7.52	24.14	8.30	21.79	9.17
	10	35.89	6.14	34.60	7.00	33.32	7.87	31.98	8.73	30.52	9.69
CUS12	-5	28.25	7.81	26.80	8.83	25.35	9.86	23.94	10.89	22.38	11.97
	0	33.54	8.35	31.95	9.32	30.30	10.30	28.69	11.27	26.87	12.35
	5	39.30	8.85	37.52	9.82	35.73	10.79	33.91	11.78	31.86	12.89
	10	45.68	9.53	43.74	10.14	41.78	10.74	39.62	11.98	37.23	13.37

Notes:

- 1 Output kW refers to the compressor duty.
- 2 Input kW refers to the compressor input power only

Capacity Data

HEATING duty - Reverse cycle mode

Outdoor Unit		Indoor Unit Condensing Temperature					
Evaporator Air On		30°C	35°C	40°C	45°C	50°C	55°C
Temperature °C/ RH %		Output kW	Output kW	Output kW	Output kW	Output kW	Output kW
CUHS5	5 / 85	14.24	14.07	14.01	13.93	13.84	13.75
	7 / 85	15.30	15.07	14.98	14.88	14.71	14.58
	10 / 80	16.40	16.30	16.09	15.90	15.70	15.55
CUHS 6	5 / 85	18.65	18.60	18.64	18.61	18.57	18.49
	7 / 85	19.78	19.71	19.69	19.58	19.49	19.31
	10 / 80	21.40	21.17	21.14	20.93	20.65	20.41
CUHS 6.5							
CUHS 7.5	5 / 85	22.16	22.01	21.94	21.89	21.75	21.69
	7 / 85	23.45	23.24	23.20	23.02	22.95	22.90
	10 / 80	25.38	25.24	25.15	24.93	24.74	24.58
CUHS 10	5 / 85	25.66	25.40	25.15	24.90	24.65	24.40
	7 / 85	27.19	26.92	26.65	26.38	26.12	25.86
	10 / 80	29.37	29.08	28.79	28.50	28.21	27.93
CUHS 12	5 / 85	29.16	28.87	28.58	28.29	28.01	27.73
	7 / 85	30.90	30.59	30.29	29.98	29.68	29.39
	10 / 80	33.38	33.05	32.72	32.39	32.06	31.74

Notes:

1 Output kW refers to the compressor duty.

2 Indoor ambient at 20°C

CUS/CUHS		A	B	C	D	E	F	G	H	J	K
5	mm	865	1148	699	550	16	1181	1213	195	457	213
5.5	mm	865	1148	699	550	16	1181	1213	195	457	213
6	mm	865	1148	699	550	16	1181	1213	195	457	213
6.5	mm	996	1376	699	550	16	1409	1441	193	610	193
7.5	mm	996	1376	699	550	16	1409	1441	193	610	193
CUS/CUHS		A	B	C	D	E	F	G	H	J	K
10	mm	866	1705	953	810	16	1738	1770	204	457	204
12	mm	866	1705	953	810	16	1738	1770	204	457	204

Technical Data

Mechanical

CUS/CUHS		5	5.5	6	6.5	7.5	10	12
Nominal Capacity(1)	kW	13.7	15.2	17.9	19.3	21.0	27.4	35.7
Nominal Input (1)	kW	5.1	5.2	6.4	6.6	6.6	10.0	11.5
Capacity Steps	%	0-100	0-100	0-100	0-100	0-100	0-100	0-100
Construction								
Material		Pre Coated Sheet Steel						
Colour		Light Grey (RAL 7035)						
Condenser								
Type		Air Cooled						
Quantity		2	2	2	3	3	2	2
Face Area	m ²	0.69	0.69	0.69	1.03	1.03	1.37	1.37
Nominal Airflow	m ³ /s	2.00	2.00	2.00	2.225	2.25	4.45	4.45
Coil Volume (2)	l	8.0	8.0	8.0	12.0	12.0	15.7	15.7
Discharge		Vertical						
Fan								
Type		Axial						
Quantity		1	1	1	1	1	2	2
Diameter	mm	630	630	630	630	630	630	630
Maximum Speed	rpm	930	930	930	930	930	930	930
Compressor								
Type		Hermetic Scroll						
Quantity		1	1	1	1	1	1	1
Oil Charge Volume	L	1.55	1.65	1.65	4.10	3.25	3.80	4.00
Refrigeration								
Number of Circuits		1	1	1		1	1	1
Refrigerant Type		R407C						
Refrigeration Control (CUH only)		Thermostatic Expansion Valve						
Unit Refrigerant Charge	kg	2.4	2.4	2.4	3.6	3.63	4.76	4.76
Dimensions								
Height	mm	767	767	767	767	767	878	878
Width	mm	1148	1148	1148	1376	1376	1705	1705
Depth	mm	865	865	865	996	996	866	866
Weights CUS Units								
Machine Weight (nom)	kg	138	140	141	236.5	203.5	242	247
Operating Weight (nom)	kg	141	143	144	241.5	208.5	261	266
Weights CUHS Units								
Machine Weight (nom)	kg	164	166?	167	261.5?	216.5	267	272
Operating Weight (nom)	kg	168	170?	171	242.5?	222.5	272	277
Connections								
Liquid Line	in	Flare 1/2	Flare 5/8	Flare 5/8	Flare 5/8	Flare 5/8	Sweat 7/8	Sweat 7/8
Suction Line	in	Sweat 7/8	Sweat 7/8	Sweat 7/8	Sweat 1 1/8	Sweat 1 1/8	Sweat 1 1/8	Sweat 1 3/8
Hot Gas Stub	in	5/8	5/8	5/8	5/8	5/8	7/8	7/8

- (1) Nominal cooling capacity based on 5°C evaporating temperature and a 35°C ambient.
 (2) Figures for guidance.

Technical Data

Electrical Data

CUS/CUHS		5	5.5	6	6.5	7.5	10	12
Unit Data								
Nominal Run Amps (1)	A	11.1	11.9	13.5	15.7	15.2	21.1	26.6
Maximum Start Amps	A	71.1	76.1	100.8	104.6	103.8	131.6	146.6
Control Circuit CUS	VAC	230	230	230	230	230	230	230
Control Circuit CUHS	VAC	24	24	24	24	24	24	24
Mains Supply	V				400/3/50			
Rec. Mains Fuse	A	20	20	25	25	32	40	40
Max Incoming Mains	mm ²	10	10	10	10	10	10	10
Compressor - Per Compressor								
Motor Rating	kW	4.45	5.3	5.9	6.65	6.9	8.9	11.6
Nominal Run Amps (1)	A	8.3	9.1	11.0	12.9	12.7	16.1	21.6
Locked Rotor Amps	A	65.5	70.5	95.0	99.0	98.0	120.0	135.0
Crankcase Heater Rating	W	65 ⁽²⁾	65 ⁽²⁾	65 ⁽²⁾	65 ⁽²⁾	50	50	50
Type of Start		Direct on Line						
Condenser Fan - Per Fan								
Motor Rating	kW	0.55	0.55	0.55	0.55	0.55	0.55	0.55
Full Load Amps	A	2.50	2.50	2.50	2.50	2.50	2.50	2.50
Locked Rotor Amps	A	5.80	5.80	5.80	5.80	5.80	5.80	5.80

- (1) Nominal data based on 5C evaporating temperature and a 35C ambient.
 (2) Heat pumps only.

Sound Data

Method of Sound Measurement

Measurement of Sound Data All sound data quoted has been measured in the third-octave band limited values, using a Real Time Analyser calibrated sound intensity meter in accordance with BS EN ISO9614 Part 1 : 2009.

All Sound Power Levels quoted are calculated from measured sound intensity according to BS EN ISO9614 Part 1 : 2009.

Semi Hemispherical

CUS 5 - 12


Sound Pressure Levels are calculated from sound power using the semi-hemispherical method where the noise source is in junction with 2 boundaries i.e. the floor and 1 wall.

Sound Pressure Measurement		Frequency (Hz)								
		dBa	63	125	250	500	1000	2000	4000	8000
CUS/CUHS 5 – 6	@1m	71	72	73	71	70	68	60	53	46
	@10m	51	52	53	51	50	48	40	33	26
CUS/CUHS 6.5 - 7.5	@1m	81	81	79	82	79	77	72	65	58
	@10m	53	53	51	54	51	49	44	37	30
CUS/CUHS 10-12	@1m	73	80	77	73	72	69	63	56	47
	@10m	53	60	57	53	52	49	43	36	27



Note: Above noise levels are with the condenser fan running at full speed. Under normal operating conditions (ambients up to 35°C) noise levels will be reduced by 3 - 4 dB.

Operating Data

Operating Limits - Cooling Only

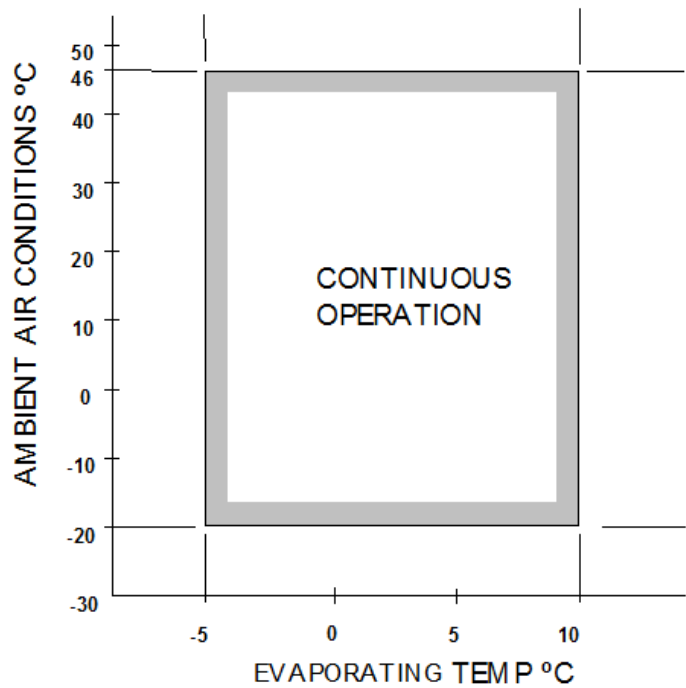


Operating Limits - HEAT PUMP

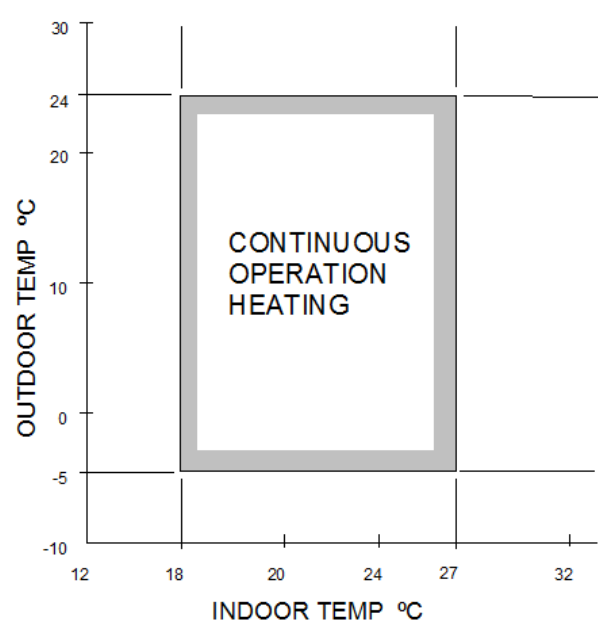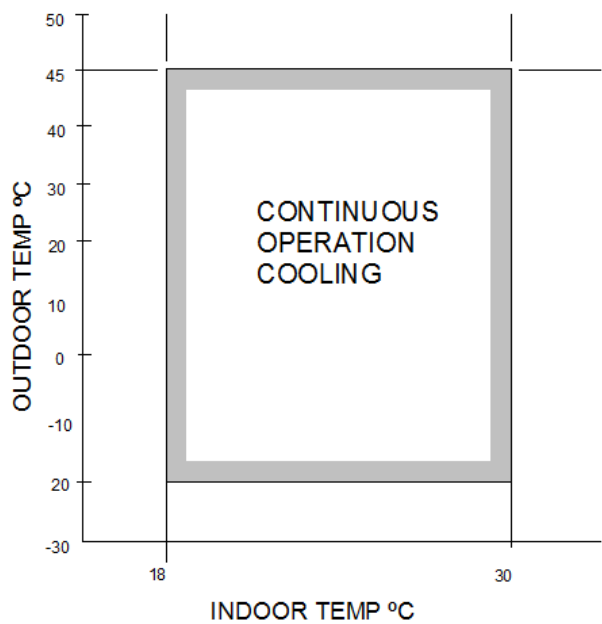

Installation


Dimensions: CUS/CUHS 5 - 7.5

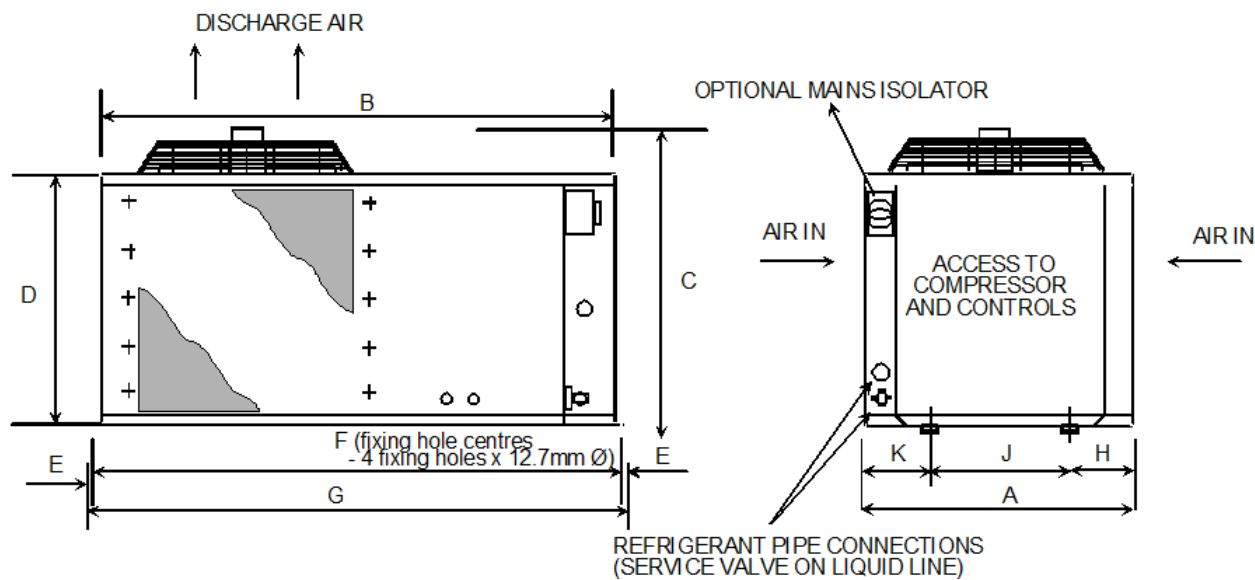

CUS/CUHS		A	B	C	D	E	F	G	H	J	K
5	mm	865	1148	767	550	16	1181	1213	195	457	213
6	mm	865	1148	767	550	16	1181	1213	195	457	213
7.5	mm	996	1376	767	550	16	1409	1441	193	610	213

Installation

Dimensions: CUS/CUHS 10 - 12

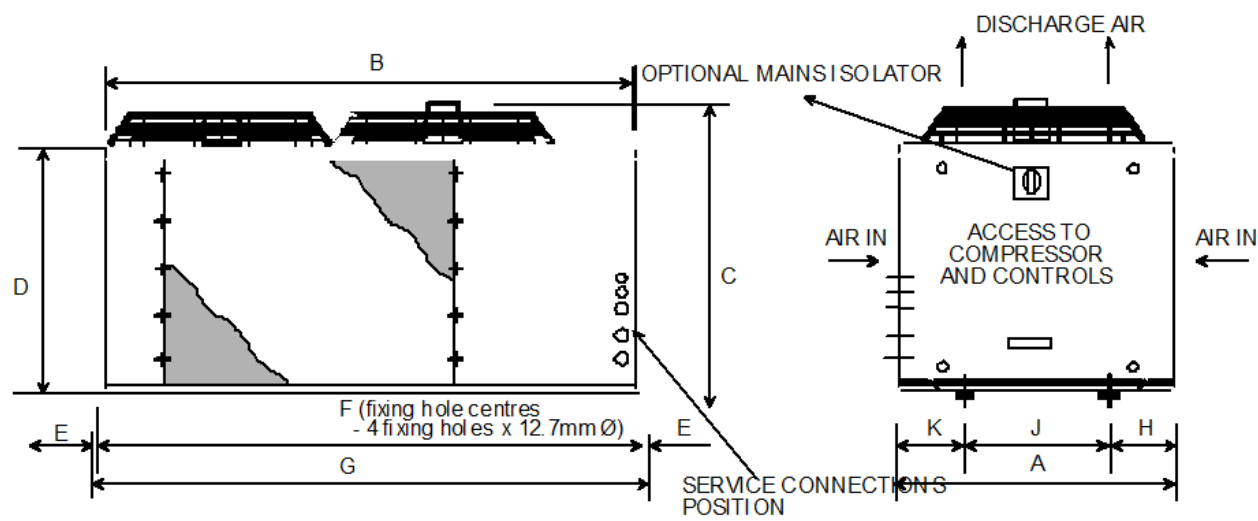

CUS/CUHS		A	B	C	D	E	F	G	H	J	K
10	mm	866	1705	953	878	16	1738	1770	204	457	204
12	mm	866	1705	953	878	16	1738	1770	204	457	204

- Notes:
- 1 Incoming Services: Connections to left hand side of unit compressor compartment.
 - 2 Airflow and Maintenance Clearance: Please allow 500mm around the unit for airflow and maintenance purpose.

Field Connections

CUS 5-12		L1
		L2
		L3
		N
		E
		576
		577
		589
		502

Mains Incoming 400/3/50

576/577 Cooling Signal from AHU (24vac)

589/502 Volt Free Contacts For Trip Indication

CUHS 5-12		L1
		L2
		L3
		N
		E
		504
		502
		523
		517
		515
		500
		589
		590

Mains Incoming 400/3/50

504 Cooling Signal from AHU (24vac)
24vac
Defrost Signal to AHU
AHU Fan running
Heating signal from AHU
0vac

589/5590 Volt Free Contacts For Trip Indication

After Sales Warranty

All Airedale products or parts (non consumable) supplied for installation within the UK mainland and commissioned by an Airedale engineer, carry a full Parts & Labour warranty for a period of 12 months from the date of commissioning or 18 months from the date of despatch, whichever is the sooner.

Parts or Equipment supplied by Airedale for installation within the UK or for Export that are properly commissioned in accordance with Airedale standards and specification, not commissioned by an Airedale engineer; carry a 12 month warranty on non consumable Parts only from the date of commissioning or 18 months from the date of despatch, whichever is the sooner.

Parts or equipment installed or commissioned not to acceptable Airedale standards or specification invalidate all warranty.

Warranty is only valid in the event that

In the period between delivery and commissioning the equipment:

- is properly protected & serviced as per the Airedale installation & maintenance manual provided
- where applicable the glycol content is maintained to the correct level.

In the event of a problem being reported and once warranty is confirmed* as valid under the given installation and operating conditions, the Company will provide the appropriate warranty coverage (as detailed above) attributable to the rectification of any affected Airedale equipment supplied (excluding costs for any specialist access or lifting equipment that must be ordered by the customer).

*Once warranty is confirmed, maintenance must be continued to validate the warranty period.

Any spare part supplied by Airedale under warranty shall be warranted for the unexpired period of the warranty or 3 months from delivery, whichever period is the longer. To be read in conjunction with the Airedale Conditions of Sale - Warranty and Warranty Procedure, available upon request.

Procedure

When a component part fails, a replacement part should be obtained through our Spares department. If the part is considered to be under warranty, the following details are required to process this requirement. Full description of part required, including Airedale's part number, if known. The original equipment serial number. An appropriate purchase order number.

A spares order will be raised under our warranty system and the replacement part will be despatched, usually within 24 hours should they be in stock. When replaced, the faulty part must be returned to Airedale with a suitably completed and securely attached "Faulty Component Return" (FCR) tag. FCR tags are available from Airedale and supplied with each Warranty order.

On receipt of the faulty part, suitably tagged, Airedale will pass to its Warranty department, where it will be fully inspected and tested in order to identify the reason for failure, identifying at the same time whether warranty is justified or not.

On completion of the investigation of the returned part, a full "Report on Goods Returned" will be issued. On occasion the release of this complete report may be delayed as component manufacturers become involved in the investigation. When warranty is allowed, a credit against the Warranty invoice will be raised. Should warranty be refused the Warranty invoice becomes payable on normal terms.

Exclusions

Warranty may be refused for the following reasons.

- Misapplication of product or component
- Incorrect site installation
- Incomplete commissioning documentation
- Inadequate site installation
- Inadequate site maintenance
- Damage caused by mishandling
- Replaced part being returned damaged without explanation
- Unnecessary delays incurred in return of defective component

Returns analysis

All faulty components returned under warranty are analysed on a monthly basis as a means of verifying component and product reliability as well as supplier performance. It is important that all component failures are reported correctly.



Head Office
Airedale International Air Conditioning Ltd
Leeds Road
Rawdon
Leeds LS19 6JY
Tel: +44 (0) 113 2391000
Fax: +44 (0) 113 2507219
E-mail enquiries@airedale.com
Web www.airedale.com